



Electronic Coin Sorter

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- Never carry out any alterations or modifications to this product.
- This product is intended for indoor use only.
- Unplug the product from the mains power socket when it is not in use.
- Do not use the machine when the back cover is open.
- Only use this product on stable, level and dry ground.
- Turn the product off and unplug it from the mains power socket before attempting any maintenance. This is to avoid the product turning on during maintenances and potentially causing injuries.
- Keep fingers, loose clothing and hair away from the hopper when the machine is in use. This can cause minor to serious injuries.
- When plugging the product into a mains power socket, be sure to check that both the product and the plug share the same voltage. An incorrect voltage will create a potential hazard and a possible fire risk.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product. Make sure the product is off, unplugged from the socket and been left for five minutes to remove the risk of electrical shock.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Operating Instructions

Technical Specification:

| | | | |
|-------------------------------------|--------------|--------------------------|------------------|
| Ambient temperature | 0°C~40°C | Power source | AC220V/50HZ |
| Ambient Humidity | 30~80% | | AC110V/60HZ |
| Hopper capacity | Max.500units | Power consumption | <45W |
| Each coins drawer | 50~300units | Dimensions | 345x306x260(mm) |
| Batch pre-set number display | 3 Digits LED | Net weight | 3.9kg |
| Counting number display | 4 Digits LED | Counting speed | Max.270units/min |

How to Use:

1. Ensure the machine is placed on a stable and level surface and then plug in and switch the product on.
2. Set an expected batch.

Each channel can be set its own expected batch (from 0 to 999).

Press the “**SET**” key to select the channel, the “**BAT**” key, “**+**” key and the “**-**” key to set the expected batch number.

Note 1: To set all of the channels to have a batch of 0, hold the “**-**” key down for approximately seven seconds.

Note 2: The batch setting can be memorised by the product.

3. Put the coins into the hopper and press the “**START/STOP**” key to allow for the product to count the coins. Press the “**START/STOP**” key again to stop the counting.
4. To check the counting results for each channel, press the “**REPORT**” key when the product is in standby mode. To exit the result check, press the “**C**” key.

Maintenance

MAKE SURE THE PRODUCT IS OFF AND UNPLUGGED BEFORE ATTEMPTING MAINTENANCE.

1. If a foreign item falls into the hopper it will cause the product to jam and potentially damage the product. To remove the object, open the back cover and remove the item. Please see the image below.

2. To remove a coin that is trapped, use your finger or a thin object to push the jammed coin and allow the coin to fall from the gap between the channels. Please see the image below.



If the product display shows “EA” this means that the optical sensor is blocked (the main cause of this being too much dust on the optical sensor’s glass). To amend this, remove the back cover and turn then place the product upside down. In the top left corner of the machine you should be able to see the optical sensor. Clean this with a soft material as to not damage the optical sensor. If this doesn’t work, simply remove the back cover by unscrewing the screw found in the back cover, removing the cover and cleaning all the parts.

Please retain a copy of all instructions for future consultation.



An Official Oypla Branded Product



Imported into the EU by Oypla.com LLP, Uxbridge, UB8 2FX

Environmental Protection

Products bearing the symbol shown above means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.