



# 600W Handheld Maxi Vacuum

# Safety Instructions

**Notice: Ensure you read and fully understand instructions before use**

**While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.**

- Never carry out any alterations or modifications to this product.
- This product is not a toy, and is only to be used for its designated purpose.
- This product is intended for indoor use only.
- Make sure to regularly clean the filter to avoid any possible issues.
- Make sure that all obstacles that you do not intend to vacuum are cleared before using the vacuum as these may cause a blockage in the suction tube.
- Do not use the product to remove any burning or smoking objects, such as cigarettes, matches or hot ashes, or any flammable liquids.
- Keep the pipe and tube ends away from the body.
- Keep hair, loose items of clothing, fingers and all other extremities away from any openings and moving parts.
- Never leave the vacuum next to a source of heat.
- Do not expose the vacuum cleaner to the elements as this may cause the appliance to break.
- To protect against electrical shock, do not immerse cord, plug or any part of this appliance in water or any other liquid.
- Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
- When the appliance is not in use, always unplug from the mains socket.
- This appliance operates using dangerous voltage levels. Never switch it on if the power supply cable is damaged, or if any other damage is visible on the appliance. Never open the housing but instead contact a qualified electrician for help.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product. Make sure the product is off, unplugged from the socket and been left for five minutes to remove the risk of electrical shock.
- If the product is damaged or has any defects, please contact [cservice@oypla.com](mailto:cservice@oypla.com)

# Operating Instructions

## Parts List:

If you are missing any of the below parts please contact [cservice@oypla.com](mailto:cservice@oypla.com)



1 x Vacuum cleaner body  
and debris holder



1 x Triangular nozzle  
attachment



1 x Pipe nozzle attachment

### **Before First Use**

- Remove the debris holder from the vacuum and check to see if the debris filter has been seated correctly.
- Attach the debris holder back onto the vacuum body, ensuring that it is securely held in place and won't fall out when the vacuum cleaner is being used.
- Be sure to check the rating label to ensure the wall socket rating is suitable.

### **How to Use**

1. Plug the 600W Handheld Vacuum into the nearest power outlet. Do not place it at a distance that will cause the cable to become a tripping hazard.
2. Place the correct accessory into the end of the vacuum body.
3. Pull the trigger to allow for the debris to be sucked into the vacuum cleaner. Allow the vacuum cleaner to work. It will suck the debris in. Do not allow the vacuum cleaner to suck or stones or any other sharp or large pieces of debris as this can damage the filter. Allow this to continue until the debris holder is full or you have cleaned the area.
4. Once finished, remove the accessories from the vacuum cleaner and empty the debris holder. Place into a safe storage area with the vacuum cleaner.

### **Cleaning and Care**

1. Before you begin to clean the product, make sure that the product is off and is unplugged from the socket.
2. Take the debris holder off of the vacuum cleaner body, ensuring that you do not drop the debris holder as this could cause the contents to fall out and damage the debris holder. Put the debris into a bin.
3. If you have used one of the attachments, simply run them under warm, soapy water and dry them manually. To clean the inside of the main vacuum tube, rub the inside with a weakly dampened flannel. Dry this manually too.
5. Before plugging the product back in, make sure all areas around the electrical components are dry to avoid injury and product damage. Make sure that the debris filter is securely held in place to avoid it becoming use whilst the vacuum cleaner is being operated.

**Please retain a copy of all instructions for future consultation.**



**An Official Oypla Branded Product**



Imported into the EU by Oypla.com LLP, Uxbridge, UB8 2FX

### **Environmental Protection**

Products bearing the symbol shown above means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.