

GARDEN

THANK YOU FOR YOUR ORDER

Contents

- 1 Front Cover
-
- 2 Safety Instructions
-
- 2 Assembly Instructions
-
- 4 Back Cover

End



30L Lawn Roller

Contents

1	Front Cover
-	
2	Safety Instructions
-	
2	Assembly Instructions
-	
4	Back Cover
	End

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Ensure all nuts and bolts are tightened and secure before use.
- Ensure that the plug, found on the side of the lawn roller, is secure once you have filled the tank with either water or sand. Failure to do so could cause the water or sand to leak.
- Leaving the product outside exposed to the weather, especially direct sun, rain and salt air, will speed up the weathering process. This can be slowed by removing the product from these conditions, or covering it with a suitable cover.
- This product is not a toy, and is only to be used for its intended purpose.
- Do not carry out alterations or modifications to this product.
- This product is intended for outdoor use only.
- Clean only with a damp cloth. Do not use industrial or abrasive cleaning substances, as these may damage the product.
- If the product is damaged or defective, please contact cservice@oypla.com
- The drum will weigh approximately 30KG when filled with water, and 45KG when filled with sand.

Assembly Instructions

If you are missing any of the below parts, please contact cservice@oypla.com

- DRUM x1 
- ROLLER HANDLE x1 
- SCRAPER BAR x1 
- ROLLER BEAM x2 
- BOLT x6 
- NUT x6 
- WASHER x2 

Contents

- 1 Front Cover
-
- 2 Safety Instructions
-
- 2 Assembly Instructions
-
- 4 Back Cover

End

1. To start, push the bottom of the roller beams (D) into the 30L tank (A), ensuring that they go all the way in. This will allow for the roller beams to be secure when you attach the scraper bar. Please see the image to the right.



2. Align the holes in the Scraper Bar (C) with the hole in the roller beams (D). Once done, push a screw (E) through each hole to hold the scraper bar in place. After this tighten a nut (F) onto the screw (D). Do not overtighten the nut as this may damage the roller beams due to the curve in the metal. Please see the images below.



3. Slide the roller handle on the inside of the roller beams, ensuring that the roller handle is directly against the inside of the roller beams. Once done, push a bolt through each hole, ensuring it goes through both parts. Once done, tighten a nut onto the bolt. Do not overtighten as this may cause the bolt to bend. After this, repeat this step to fully attach the handle.



Contents

- 1 Front Cover
-
- 2 Safety Instructions
-
- 2 Assembly Instructions
-
- 4 Back Cover

End

HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55
Email: cservice@oypla.com
Live Chat: WWW.OYPLA.COM

CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT