



SPORTS

THANK YOU FOR YOUR ORDER

Contents

- 1 Front Cover
 -
- 2 Safety Instructions
 -
- 2 Battery Guidance
 -
- 3 Assembly Instructions
 -
- 3 Cleaning and Maintenance
 -
- 4 Folding & Unfolding
 -
- 5 Operating Instructions
 -
- 6 Trouble Shooting
 -
- 7 Back Cover

End



Electric Powered Golf Trolley

Contents

1	Front Cover
-	
2	Safety Instructions
-	
2	Battery Guidance
-	
3	Assembly Instructions
-	
3	Cleaning and Maintenance
-	
4	Folding & Unfolding
-	
5	Operating Instructions
-	
6	Trouble Shooting
-	
7	Back Cover
	End

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product contains small parts that could be a choking hazard if swallowed. Keep these items away from children and animals.
- Make sure all fastenings are tightly in place and that everything is in order before using the product. This should be checked periodically by an adult.
- This product is intended for outdoor use only.
- This product is not a toy, and is only to be used for its designated purpose.
- Do not carry out alterations or modifications to this product.
- Never allow children to operate or play with this product.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances, as these may damage the product.
- Leaving the product outside exposed to weather, especially direct sun and rain, will speed the weathering process. This can be slowed by removing the product from these conditions.
- To protect against electrical shock, do not immerse cord, battery, or any part of this product in water or any other liquid.
- Never operate electrical appliances in the immediate vicinity of water sources.
- Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
- If the product is damaged or defective, please contact cservice@oypla.com

Battery Guidance

Please follow the below guidelines to ensure your battery operates smoothly.

- The battery should be charged as soon as possible after each use. Leaving batteries discharged for long periods of time will affect the battery life.
- The battery should be stored and charged on a dry, non-carpeted surface and charged at temperatures ranging between 10 degrees and 30 degrees Celsius. Charging above or below these temperatures is not recommended as it can reduce the battery capacity.
- Do not charge the battery near a heater or other heat source.
- The battery charging red colour stands for positive, and black for negative. In case of battery replacement, please reconnect the poles of the battery correctly, otherwise your caddy may suffer damage.
- The battery charger should only be connected to an earthed socket outlet; the battery charger should only be opened and maintained by authorised personnel.
- When connecting your battery to the trolley, please ensure that the connections match up and everything is in order before operating the trolley.
- Do not charge the battery in a sealed container or in an upside-down position.
- Charge the battery in a well-ventilated area.
- Never disassemble the battery or throw it into a fire.
- Never touch the electric poles of the battery.

Contents

- 1 Front Cover
-
- 2 Safety Instructions
-
- 2 Battery Guidance
-
- 3 Assembly Instructions
-
- 3 Cleaning and Maintenance
-
- 4 Folding & Unfolding
-
- 5 Operating Instructions
-
- 6 Trouble Shooting
-
- 7 Back Cover

 
End

Assembly Instructions

Parts List:

- If you are missing any of the below parts, please contact cservice@oypla.com

- 1. Handle
- 2. Upper Holder
- 3. Upper Holder Belt
- 4. Battery
- 5. Rear Wheel
- 6. Wheel Cap
- 7. Wheel Rubber
- 8. Battery Tray
- 9. Lower Holder
- 10. Front Wheel
- 11. Folding Mechanism
- 12. Charger

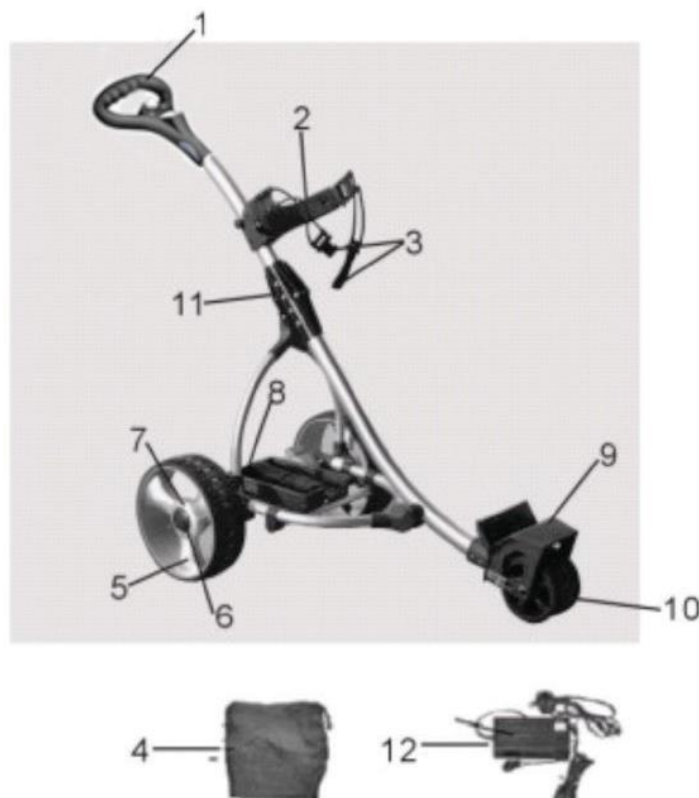

General Maintenance

- The trolley is designed to help the user concentrate on their golf, while the trolley does the work of carrying your bag. In order to keep your trolley looking and functioning at its best, we advise that you wipe any mud or grass from the frame, wheels and chassis after every round with a damp cloth or paper towel.
- Do NOT use any high-pressure jet washers to prevent moisture entering the electronic systems, motors or gear boxes of the caddy.
- Remove the rear wheels after every few uses and remove any debris that might cause the wheels to drag. You might also apply some lubricant, such as WD-40, to keep moving parts smooth.
- A four/five-hour round of golf played once a week for 12 months is the equivalent to four years use of a lawnmower. Please inspect your trolley at least once a year thoroughly.
- Always disconnect the battery when you store the trolley. If you are not planning to play for at least a month, store the battery in a warm and dry place.

Contents

- 1 Front Cover
-
- 2 Safety Instructions
-
- 2 Battery Guidance
-
- 3 Assembly Instructions
-
- 3 Cleaning and Maintenance
-
- 4 **Folding & Unfolding**
-
- 5 Operating Instructions
-
- 6 Trouble Shooting
-
- 7 Back Cover

End

Folding & Unfolding

To Unfold:



To Fold:



Attach the wheels to the axles by pushing wheel locking button on the outside of the wheel, and inserting the axle extension into the wheel. Ensure to keep the locking button on the outside of the wheel pushed in during the process, in order to enable the axle extensions, including the two pins, to be inserted all the way into the wheel. If not locked in, the wheel will not be connected to the clutch and will not be propelled. Test the lock by trying to pull the wheel out. To disassemble the wheels, proceed in reverse order.

Place the battery pack onto the battery tray, with the connectors facing the left side of the trolley. Fasten the velcro strap around the battery tightly. Insert battery plug into caddy outlet.

Contents

 
- 1 Front Cover
-
- 2 Safety Instructions
-
- 2 Battery Guidance
-
- 3 Assembly Instructions
-
- 3 Cleaning and Maintenance
-
- 4 Folding & Unfolding
-
- 5 **Operating Instructions**
-
- 6 Trouble Shooting
-
- 7 Back Cover

End

Operating Instructions

Please refer to the below diagrams for instructions on how to operate your trolley.

Power

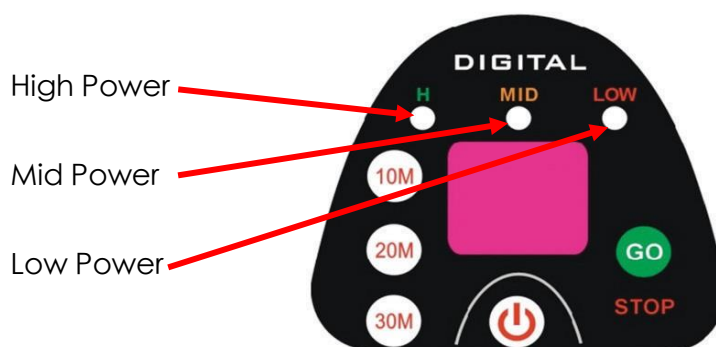


Movement

10m Button – pressing this will instruct the trolley to move 10m, before stopping.

20m Button – pressing this will instruct the trolley to move 20m, before stopping.

 30m Button – pressing this will instruct the trolley to move 30m, before stopping.

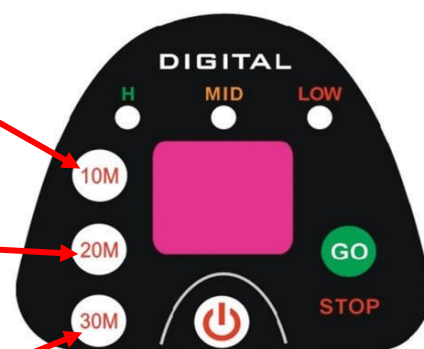

Contents

 
- 1 Front Cover
-
- 2 Safety Instructions
-
- 2 Battery Guidance
-
- 3 Assembly Instructions
-
- 3 Cleaning and Maintenance
-
- 4 Folding & Unfolding
-
- 5 Operating Instructions
-
- 6 Trouble Shooting
-
- 7 Back Cover

End

Cruise & Brake

Easy scrolling action allows you to choose your preferred speeds, to suit your pace perfectly. The one press stop/start (power brake) function means your cart will always proceed at the speed you have selected.

Select the speed to match your pace. The cart will remember its last setting when you stop, and travel at that speed automatically when you start again, except when you change the speed knob position.

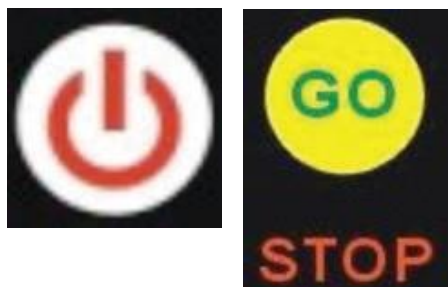

The power button controls the power supply. Press for 2-5 seconds in order to switch the caddy ON or OFF. After you have connected your battery, you need to press ON, and the battery LED will illuminate. Now your caddy is ready for operation.

In order to turn the trolley on, push the ON/OFF button until the battery charge LED lights up. While holding onto the handle, start dialling the speed control with your index finger slowly forward/clockwise. The trolley will start moving forwards. Adjust the speed seamlessly to the desired pace. To stop or slow the trolley down, either dial the speed control knob backwards or use the cruise control or ON/OFF buttons as described previously.

Troubleshooting

SYMPTOM	RESOLUTIONS
Trolley does not have power	<ul style="list-style-type: none"> - Check fuse in the battery case - Check all wiring connections and plugs - Check battery charge - Check if wheels & clutches are in order
Motor is running but wheels don't turn	<ul style="list-style-type: none"> - Check if wheels are secured to axle by split pin - Check right and left wheel position
Trolley pulls to left or right	<ul style="list-style-type: none"> - Check if wheel is fitted over the clutch and latched to axle - Check if clutch pin is visible at both sides of the axle - Check clutch turns freely in one direction only
Battery lacks power	<ul style="list-style-type: none"> - Check cable connections - Check if fuse is 30A - Check charger function
Problems attaching wheels	<ul style="list-style-type: none"> - Remove outer cap and adjust quick release catch

Contents



HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55
Email: cservice@oypla.com
Live Chat: WWW.OYPLA.COM

CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

ENVIRONMENTAL PROTECTION

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



Manual Version: v1.0

Model Code: 3045

Oypla.com LLP / www.oypla.com