



Out of this world savings.

User Manual

Model: **3053**



Garden Wagon

Contents

Safety Information	2
What's In The Box?	3
Assembly Instructions	4

Safety Information

Please ensure you read and fully understand instructions before use














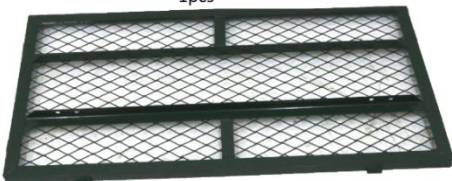


While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
 - This product is intended for outdoor use only.
 - Do not carry out alterations or modifications to this product.
 - Clean only with a damp cloth. Do not use strong industrial cleaning substances.
 - Leaving the product outside exposed to weather, especially direct sun, rain and salt air, will speed the weathering process. This can be slowed by removing the product from these conditions, or covering it with a suitable cover.
 - Do not fill the tires with too much air as this may cause for them to become damaged due to the density.
 - Before using the product, make sure all the fastenings are tightly in place and that everything is in order, and checked periodically by an adult.
 - The maximum weight capacity is 400kg. Do not exceed this.
 - Ensure the load is evenly spread.
 - Don't turn too quickly as this may cause the load to become unsafe and fall out.
 - Don't pull the trolley off of curbs or other elevated places as this may damage the load and/or the trolley. Use a ramp where possible.
 - If the product is damaged or has any defects, please contact cservice@oypla.com.
 - **Warning! This product contains small parts that could be a choking hazard. Keep children and pets away whilst assembling the product.**
-

What's In The Box?

Please note that you will be referring to the below parts list during assembly

If any of the below parts are missing or damaged, please contact our dedicated team at cservice@oypla.com.




<p>2pcs</p>  <p>Platform Front/Rear Panel</p>	<p>2pcs</p>  <p>Platform Side Panel</p>		
<p>1pcs</p>  <p>Trolley Platform</p>	<p>1pcs</p>  <p>Handle Beam</p>		
<p>1pcs</p>  <p>Handle Beam Axle</p>	<p>1pcs</p>  <p>Rear Axle</p>		
<p>8pcs</p>  <p>Hitch Pin</p>	<p>1pcs</p>  <p>Handle Support Bolt</p>	<p>8pcs</p>  <p>Trolley Support Bolts</p>	<p>1pcs</p>  <p>Handle Beam Washer</p>
<p>8pcs</p>  <p>Support Washers</p>	<p>9pcs</p>  <p>Support Nuts</p>	<p>4pcs</p>  <p>Wheel</p>	<p>1pcs</p>  <p>Rotation Joint</p>
<p>5pcs</p>  <p>Securing Pin</p>			
<p>1pcs</p>  <p>Handle</p>			

Assembly Instructions

Please refer to the below information to help assemble your Oypla product




If you require assistance with the assembly of your Oypla product, please contact our dedicated team at cservice@oypla.com.

Place the handle beam (part 1) on top of the handle beam axle (part 2), ensuring that the handle beam (part 1) is as far down as possible. This should leave a section of the handle beam axle (part 2) exposed. Slide the handle beam washer (part 3) onto the exposed section of the handle beam axle (part 2). Secure these in place with a securing pin (part 4). Please see the images to help.

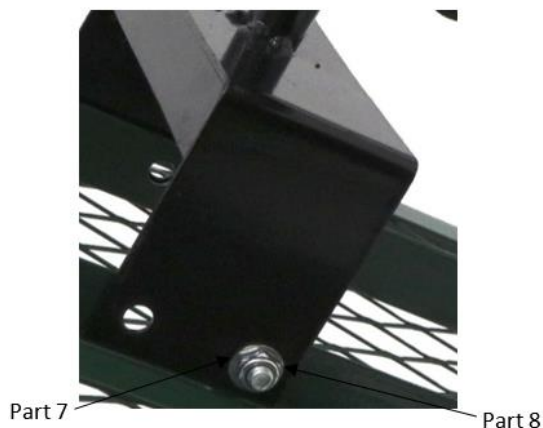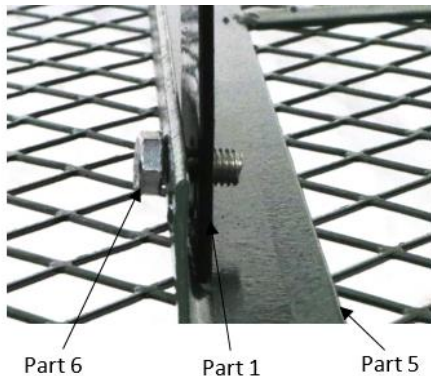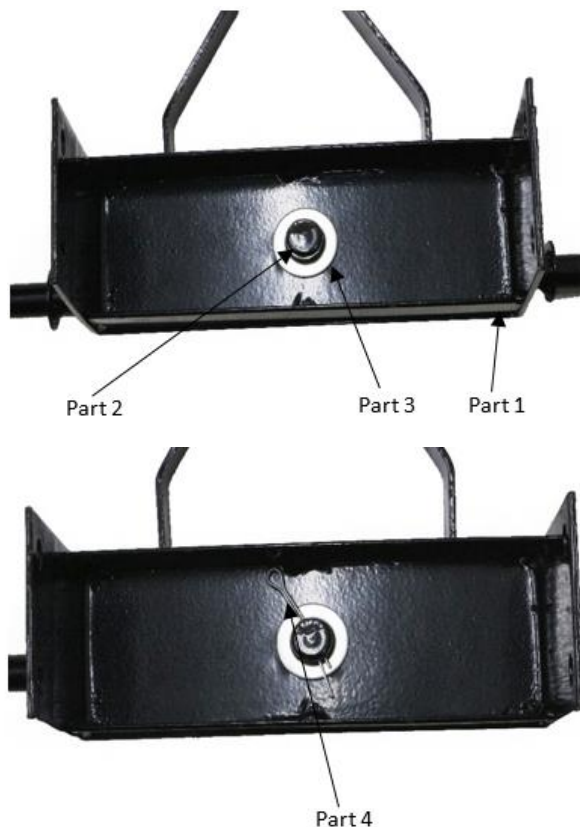


Slide the handle beam (part 1) onto the trolley platform (part 5) so that it aligns with either group of holes in the bottom of the trolley platform (part 5). Once done, hold the handle beam (part 1) in place using a trolley support bolt (part 6) and secure this in place with a support washer (part 7) and a support nut (part 8). Repeat for the other holes. Please see the images to help.

Slide the rear axle (part 9) onto the other set of holes. As with the handle beam, secure these in place using the trolley support bolts (part 6), support nuts (part 7) and support washers (part 8). Repeat for the other holes. Please see the image to the right.

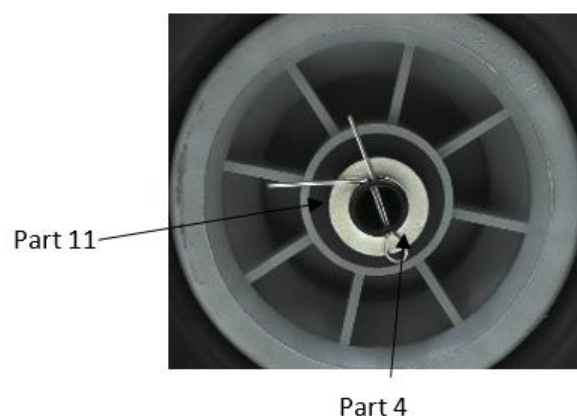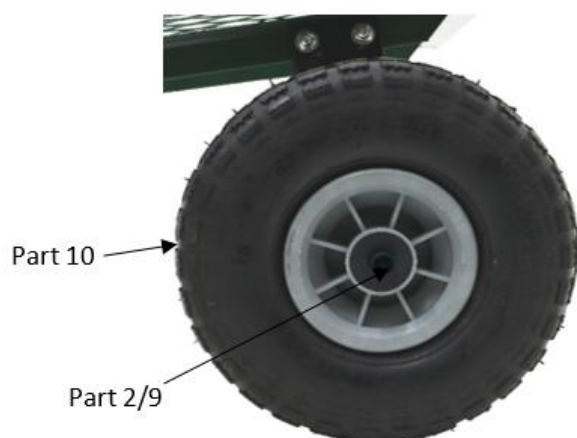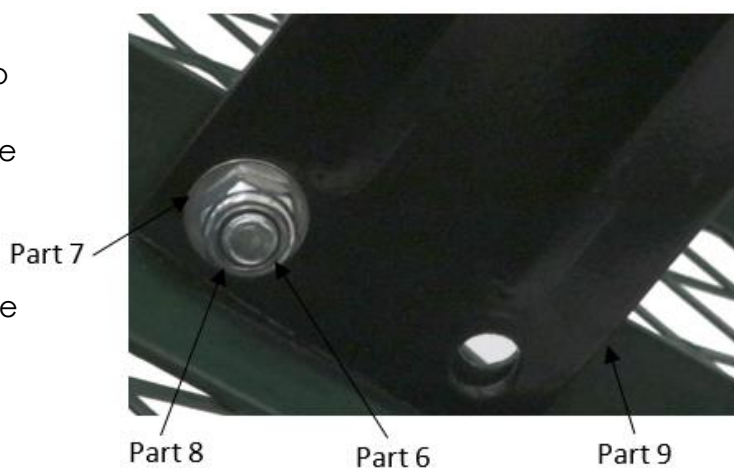


Push a wheel (part 10) onto either the handle beam axle (part 2) or the rear axle (part 9), then slide a wheel washer (part 11) onto either axle and secure both the wheel (part 10) and the wheel washer (part 11) into place with a securing pin (part 4). Repeat this step on the opposite side and the remaining axle to complete the wheels. Please see the images above.

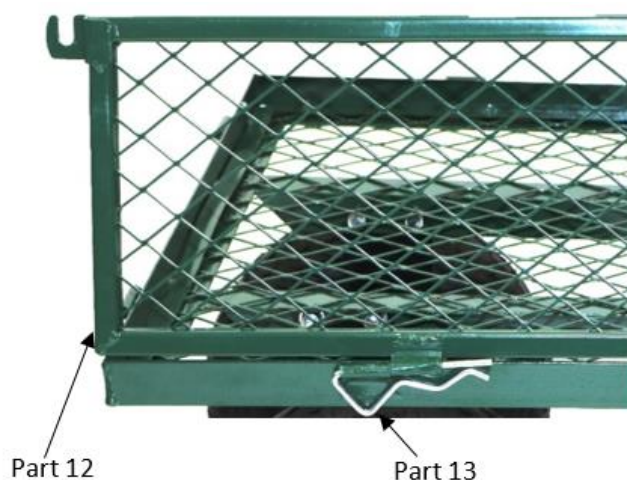


Align the metal tube on the bottom of the platform side panel (part 12) with the metal tube on the trolley platform (part 5), securing this in place with a hitch pin (part 13). Repeat this on the other side of the platform side panel (part 12) to complete this side and repeat this process on the opposite side of the trolley platform (part 5) to complete both sides. Please see the image for guidance.

Align the metal tube on the bottom of the trolley platform front panel (part 14) with the metal tube on the trolley platform (part 5), securing this in place with a hitch pin (part 13). Repeat this on the other side of the platform front panel (part 14) to complete this side and repeat on the opposite side of the platform (part 5) to complete both sides. Please see the image for guidance.

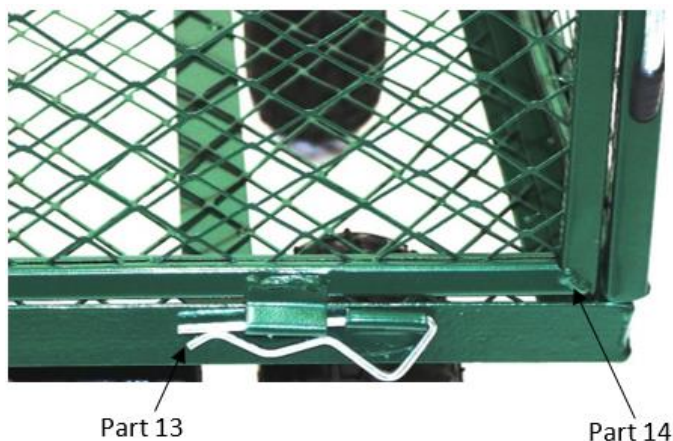

Slide the handle (part 15) into the handle rotation pod (part 16), making sure the holes in both parts are aligned. After this, push the handle support bolt (part 17) through both parts, holding them into place. Secure these with a support nut (part 7) and a support washer (part 8).

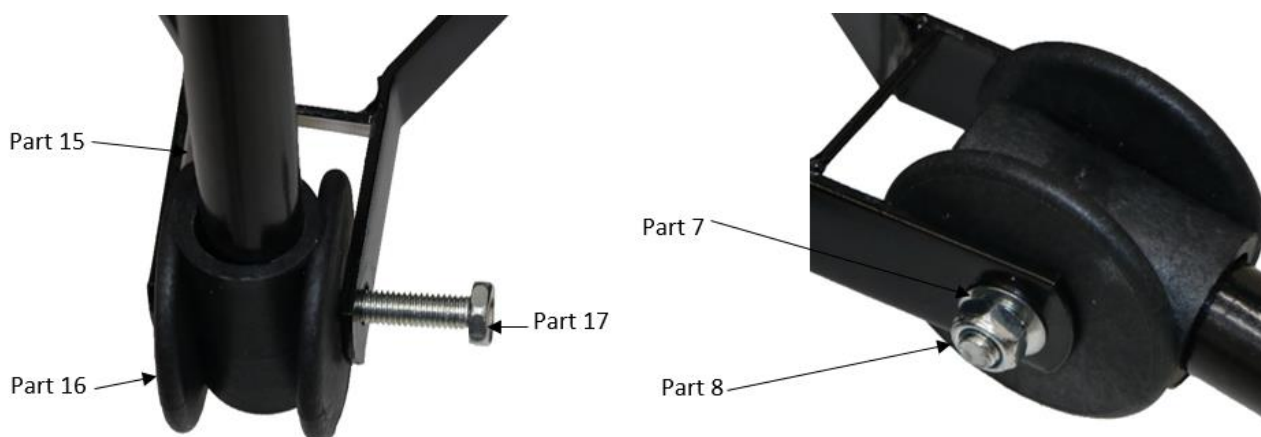

Once completed, ensure that all the support nuts (part 8) are tightened so the parts are secure and won't fall off over time and that the securing pins (part 4) are all bent to ensure that the wheels won't fall off when using the Heavy Duty Garden Trolley. Make sure to pump the wheels (part 10) up before use so that when transporting heavy loads in the Heavy Duty Garden Trolley the wheels don't become worn at a faster rate. Do not over fill the wheels as this may cause them to become too dense and more likely to burst.



Have a Question About Your Purchase?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55

Email: cservice@oypla.com

Live Chat: www.oypla.com

Consider the Environment!

By recycling the cardboard box in which this product was packed, you contribute towards helping the environment. If you see a recycling logo such as the below on the packaging, it can be recycled. If a recycling logo is not present, please check with your local authority before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

An Official Oypla Branded Product

Imported by Oypla.com LLP, Uxbridge, UB8 2FX

User Manual

Model Code: 3053

Oypla.com LLP / cservice@oypla.com