

User Manual

Model Code: 3073

### Contents

1 Front Cover

-

SafetyInstructions

\_

3 AssemblyInstructions

-

4 AssemblyInstructions

-

5 Back Cover

End



Lawn Aerator

**OYPL**3

Model Code: 3073

Oypla.com LLP / www.oypla.com

# Safety Instructions

Front Cover

-

1

2 SafetyInstructions

-

3 Assembly Instructions

-

4 AssemblyInstructions

-

5 Back Cover

End

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- Never carry out any alterations or modifications to this product.
- Unpacking, installing and fixing the parts are to be completed by an adult.
- This product is intended for outdoor use only.
- Makes sure the area in which you wish to use the lawn aerator has been cleared of objects before use.
- This product is not intended for use by persons (including children) with reduced physical, sensory and mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by persons responsible for their safety.

- exposed to weather, especially direct sun, rain and salt air, will speed the weathering process. This can be slowed by removing the product from these conditions, or covering it with a suitable cover.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product. Be sure to clean the aerator spikes regularly to maintain the highest level of performance.
- This product is not suitable for use by children.
- This product has lots of very sharp points. Ensure safety gloves are worn when using the product to avoid personal injury.
- If the product is damaged or has any defects, please contact cservice@oypla.com.

## Warnings

⚠ This product has lots of very sharp points. Ensure safety gloves are worn when using the product to avoid personal injury.

1 Front Cover

-

SafetyInstructions

-

3 AssemblyInstructions

-

4 AssemblyInstructions

\_


5 Back Cover

End

## Assembly Instructions

#### Parts List:

- If you are missing any of the below parts, please contact <a href="mailto:cservice@oypla.com">cservice@oypla.com</a>
- Please be aware that you will be referring to this parts list throughout the assembly process.

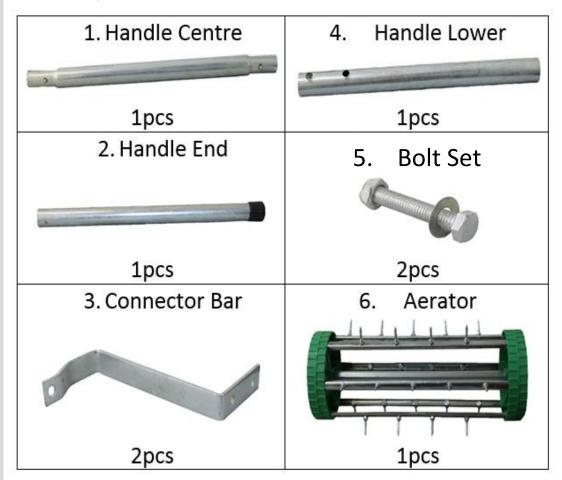

To begin, remove all the parts from the carton. After this, unscrew the nut and washer from the side of the aerator. Once done, place a connector bar (part 3) onto the end of the aerator. Secure this in place with the washer and a nut. Please see the images below for more detail. Repeat on the other side once done.





Model Code: 3073

1 Front Cover

-

SafetyInstructions

\_

3 Assembly Instructions

-

4 AssemblyInstructions

-

5


Back Cover

End

To assemble the handle, push the handle end (part 2) and the handle lower (part 4) onto either side of the handle centre (part 1). Be sure that they lock into place using the pressure buttons found on the handle centre (part 1). Please see the image below for more detail.



To attach the handle to the aerator section, align the holes in the handle lower (part 4) with the holes found in the top of the connector bar (part 3). Next, push a bolt (part 5) through both of the holes, making sure they go through both the handle lower (part 4) and the connector bar (part 3). Once they do, push a washer (part 5) onto the exposed sides of the bolts and secure them in place using a nut each (part 5). Please see the image below for more detail.

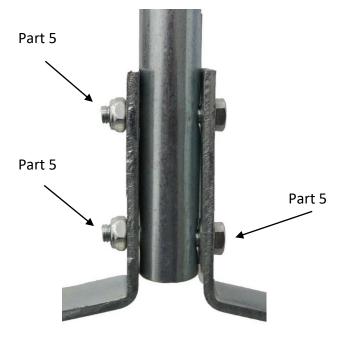

1 Front Cover

-

SafetyInstructions

-

3 AssemblyInstructions

-

4 AssemblyInstructions

\_

5 Back Cover

End

## HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55
Email: cservice@oypla.com
Live Chat: WWW.OYPLA.COM

### CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.









PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION



AN OFFICIAL OYPLA BRANDED PRODUCT

Model Code: 3073

Oypla.com LLP / www.oypla.com

