

YPLATM HOME



CE

Heavy Duty 1400W Pond Cleaner

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- This product is intended for indoor use only.
- Never carry out any alterations or modifications to this product.
- Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
- When the appliance is not in use, always unplug from the mains socket.
- To protect against electrical shock, do not immerse cord or the plug into water.
- Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
- Make sure to regularly clean the filter to avoid any possible issues.
- Make sure that all obstacles that you do not intend to vacuum are cleared before using the vacuum as these may cause the suction tube to block.
- Do not use the appliance to remove any burning or smoking objects, such as cigarette matches or hot ashes, or any flammable liquids.
- Keep the pipe and tube ends away from the body.
- Keep hair, loose items of clothing, fingers and all other extremities away from any openings and moving parts.
- Never leave the vacuum next to a source of heat.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials.
- Do not expose the vacuum cleaner to the elements as this may cause the appliance to break.
- This appliance operates using dangerous voltage levels. Never switch it on if the power supply cable is damaged, or if any other damage is visible on the appliance. Never open the housing but instead contact a qualified electrician for help.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Operating Instructions

Parts List:

If you are missing any of the below parts please contact cservice@oypla.com

Please be aware that you will be referring to this parts list throughout the assembly process.

| | | |
|---|--|---|
| <p>Vacuum Cleaner</p>  <p>1pcs</p> | <p>Input Tube</p>  <p>1pcs</p> | <p>Extender Pipes</p>  <p>4pcs</p> |
| <p>Filtration Bag</p>  <p>1pcs</p> | <p>Output Tube</p>  <p>1pcs</p> | <p>Pipe Attachments</p>  <p>4pcs</p> |

Before First Use

- Remove the lid and take all the parts out from inside the vacuum cleaner. Be sure to check that you have all the parts.
- Attach the filtration back to the highest hole in the vacuum cleaner.
- Be sure to check the labels on the plug and ensure the volts correlate to the volts from the wall socket.

How to Use

1. Place the input tube inset the top hole in the vacuum cleaner, then place it into the water source.
2. Place the output tube into the opposite hole in the vacuum cleaner, then place it in the same water source.
3. Press the 'ON/OFF' switch into the 'ON' position. This will cause the water to begin to be sucked into the vacuum cleaner. Allow the vacuum cleaner to work. It will suck water in then automatically filter out the clean water (removed of items such as stones and wood). Allow this to continue until the filtration bag is fully or you have cleaned the pond.
4. Once finished, remove both tubes from the vacuum cleaner and empty the filtration bag. Place all items into the vacuum cleaner and then store.

Use as a Dry Vacuum Cleaner

ATTENTION: Only use the unit as a dry vacuum cleaner with the enclosed filter bag!

1. Ensure the unit stands safely.
2. Switch the unit off with the switch and pull the power plug.
3. Unlock the container locking system and remove the motor housing.
4. Pull the enclose filter bag over the suction socket inside the container.
5. Refit and lock the motor housing. Connect the unit to the power supply and turn it on with the switch. Select a suitable nozzle.
6. Once you are finished with the product, turn the unit off at the switch.

Cleaning and Care

1. Before you begin to clean the product, make sure that the product is off and is unplugged from the socket.
2. Take the lid off of the vacuum cleaner by unclipping the clips on the side of the lid. When removing the lid, be sure to not drop or throw the lid to the side as the filtration system is built into the lid and doing so will cause damage to the system.
3. Remove the filtration bag, ensuring that all items brought in by the input tube are in the bag. Empty the filtration bag into the correct bin. Wash the inside of the vacuum cleaner. Put the filtration back inside the vacuum cleaner. Do not throw the filtration bag away.
4. If you have used an extender pipe and one of the attachments, simply wash out the extender pipe with arm, soapy water and leave to dry. With the pipe attachments, run them under warm water and dry manually.
5. Before plugging the product back in, make sure all areas around the electrical components are dry to avoid injury and product damage.

Wearing Parts

Foam filters, valve rubber parts and filter bags are wearing parts and are, therefore, not covered by our warranty.

Storage

Empty out the collection container and clean the unit. Store in a dry, frost protected room, inaccessible to children.

| Troubleshooting | Cause | Remedy |
|--|--|--|
| The unit does not perform its suction function | Drain Hose incorrectly fitted | The non-return valve must be located at the free end of the drain hose |
| | Excessive height difference between water level and unit | |
| The unit does not reach its full capacity | Dirt has accumulated in the foam filter, in the suction tube or in the suction hose | Remove dirt |
| | Dirt has accumulated in the area of the non-return valve at the drain hose preventing it from closing properly | Remove dirt |
| The collection container does not drain, the unit switches off immediately following the drain pause | The collection container cannot drain | Lay the drain hose without kinks. Provide a slight gravity for the drain hose. Once drained, the container must be almost completely empty |
| | The collection container and drain hose are soiled | Remove dirt |
| Low suction capacity | The more tubes that are used, the higher the tube frictional resistance-the suction capacity reduces | How to improve the suction capacity: Hold the suction tube as flat as possible |

Please retain a copy of all instructions for future consultation.



An Official Oypla Branded Product



Imported into the EU by Oypla.com LLP, Uxbridge, UB8 2FX

Environmental Protection

Products bearing the symbol shown above means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.