

OYPLATM

LEISURE



Air Rifle Target

USER MANUAL Model No: 3090

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- Never carry out any alterations or modifications to this product.
- This product is intended for outdoor use only.
- When firing at the air rifle target when it is free standing, be sure to have a backboard behind the target to prevent any missed pellets from flying off and potentially causing damage and/or injury.
- When firing at the air rifle target when it is mounted to a wall, make sure there are no objects in the immediate vicinity of the wall to prevent any missed pellets from hitting them.
- Do not fire at the target if you are closer than 20 feet as the pellets may ricochet and cause injury.
- Do not operate an air rifle on your own unless you are aged fourteen or above on private land where permission to shoot has been given. Those below the age of fourteen may shoot airguns only when supervised by someone over twenty-one years of age.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Operating Instructions

Parts List:

If you are missing any of the below parts please contact cservice@oypla.com

Please be aware that you will be referring to this parts list throughout the assembly process.

Carton Includes:

1 x Air rifle target

SCREWS ARE NOT INCLUDED FOR INSTALLATION

How to Install onto a Wall:

1. Create a flat line (measuring at 47.5cm apart, this being the distance between the centres of the holes on the back of the target) on the wall.
2. Drill a shallow hole at either end of the line and hold the air rifle target against the wall, ensuring that the holes align.
3. Drill screws into the wall. When doing so, make sure that you leave enough space to hook the air rifle target onto the screws.

Please retain a copy of all instructions for future consultation.



An Official Oypla Branded Product

USER MANUAL Model No: 3090