

OTPLE



1200W Ash Vacuum

USER MANUAL Model No: 3093

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- This product is intended for indoor use only.
- Never carry out any alterations or modifications to this product.
- The ash vacuum is for cold ash only. Never use the ash vacuum on hot ash.
- Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
- When the appliance is not in use, always unplug from the mains socket.
- To protect against electrical shock, do not immerse cord or the plug into water.
- Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
- Make sure to regularly clean the filter to avoid any possible issues.
- Make sure that all obstacles that you do not intend to vacuum are cleared before using the vacuum as these may cause the suction tube to block.
- Do not use the appliance to remove any burning or smoking objects, such as cigarette matches or any flammable liquids.
- Keep the pipe and tube ends away from the body.
- Keep hair, loose items of clothing, fingers and all other extremities away from any openings and moving parts.
- Never leave the vacuum next to a source of heat.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials.
- Do not expose the vacuum cleaner to the elements as this may cause the appliance to break.
- This appliance operates using dangerous voltage levels. Never switch it on if the power supply cable is damaged, or if any other damage is visible on the appliance. Never open the housing but instead contact a qualified electrician for help.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Operating Instructions Parts List:

If you are missing any of the below parts please contact <u>cservice@oypla.com</u>



Before First Use

• Remove the lid and take all the parts out from inside the ash vacuum. Be sure to check that you have all the parts. Pop the wheels into the underside of the base corners of the ash vacuum.

• Attach the lid back on to the ash vacuum body, ensuring that you do not damage the filter in the process.

• Be sure to check the labels on the plug and ensure the volts correlate to the volts from the wall socket.

How to Use

1. Place the input tube inset the top hole in the ash vacuum.

2. Plug the ash vacuum into the nearest power outlet. Do not place it at a distance that will cause the power cable to becoming a safety hazard.

3. Press the 'ON/OFF' switch into the 'ON' position. This will cause the ash to begin to be sucked into the vacuum cleaner. Allow the ash vacuum work. Allow this to continue until the ash vacuum is full or you have cleaned the desired area.

4. Once finished, unplug the ash vacuum and wrap the plug around it. Remove the input tube from the ash vacuum and empty the ash vacuum itself. Store the ash vacuum in a safe place.

5. The ash vacuum is fitted with a filling level indicator. If the filling level indicator shows a red bar, tank contents and filter should be emptied or cleaned. The red bar indicates severe soiling of the filter; this can also happen when the tank is not yet full. You must tap on the filter to clear it again.

Cleaning and Care

1. Before you begin to clean the product, make sure that the product is off and is unplugged from the socket.

2. Take the lid off of the ash vacuum by unclipping the clips on the side of the lid and the ash vacuum body. When removing the lid, be sure to not dropor throw the lid to the side as the vacuum turbine is built into the lid and doing so will cause damage to the system.

3. Empty the ash vacuum into the correct bin. Wash the inside of the ash vac. Place the lid/vacuum turbine back inside of the ash vacuum.

4. Pop the wheels out of the underside of the base corners. Run these under warm water and either dry manually or leave them to dry. Pop these back into the corners once they're dry.

5. Before plugging the product back in, make sure all areas around the electrical components are dry to avoid injury and product damage.

HAVE A QUESTION ABOUT YOUR PURCHASE?

OUR DEDICATED CUSTOMER SERVICES TEAM ARE HAPPY TO HELP CONTACT THEM VIA:

> TELEPHONE: 020 3600 2255 EMAIL: cservice@oypla.com LIVE CHAT: www.oypla.com

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

CE





Environmental Protection

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



Imported by Oypla.com LLP, Uxbridge, UB8 2FX

USER MANUAL Model No: 3093