

# OYPOLEA™

LEISURE



## 4ft Camping Table

USER MANUAL Model No: 3110

# Safety Instructions

**Notice: Ensure you read and fully understand instructions before use**

**While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.**

- This product is not a toy, and is only to be used for its designated purpose.
- Do not carry out alterations or modifications to this product.
- Do not exceed the maximum weight limit of 20kg
- Before using the product, make sure all fastenings are tightly in place and that everything is in order, and checked periodically by an adult.
- Keep fingers, loose clothing, and hair away when folding the product.
- The product's leg height can be adjusted to 55cm, 62cm, or 70cm. Make sure the legs click into place before applying any weight to the product.
- When using the product outside, be sure to only place it on dry, stable ground.
- Leaving the product exposed to weather, especially direct sun, rain and salt air, will speed the weathering process. This can be slowed by removing the product from these conditions, or covering it with a suitable cover.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the look of the product.
- If the product is damaged or has any defects, please contact [cservice@oypla.com](mailto:cservice@oypla.com)

**Please retain a copy of all instructions for future consultation.**



**An Official Oypla Branded Product**

**USER MANUAL Model No: 3110**