SPORTS THANK YOU FOR YOUR ORDER

Page 1

User Manual

Model Code: 3129, 3130, 3131

Contents 1 1 1 2 2 Safety Instructions 5 Back Cover

Sports Net

Model Code: 3129, 3130, 3131 Oypla.com LLP / www.oypla.com



Front Cover

Instructions

Assembly

Instructions

Back Cover

End

Safety

1

2

3

5

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- If at any time during the activity you feel faint, dizzy, experience pain, stop and consult your physician or doctor.
- Children should be supervised at all times when using the product.
- Leaving the product outside exposed to weather, especially direct sun, rain and salt air, will speed the weathering process.
 This can be slowed by removing the product from these conditions, or covering it with a suitable cover.

- Clean only with a damp cloth. Do not use strong industrial cleaning substances.
- Do not carry out alterations or modifications to this product.
- Make sure to only use the net in an area that is spacious and free of objects to avoid causing property damage and/or injury.
- Do not run into or violently pull the net as this may cause the net to break.
- Using this product in high winds may cause product failure and/or personal injury.
- If the product is damaged or has any defects, please contact <u>cservice@oypla.com</u>

OYPLa

Assembly Instructions

Parts List:

- If you are missing any of the below parts, please contact <u>cservice@oypla.com</u>
- Please be aware that you will be referring to this parts list throughout the assembly process.



1. Place one of the net pole sets on the ground, allowing a fair amount of space for you to build the net frame. Once done, begin to take the poles out of the coupler and place them into the four-point frame base found on the bottom of the net pole set (as seen in the image on the top left). Make sure the coupler is on the ground once you have finished building the bottom of the net frame (as seen in the image on the top right).

1 Front Cover

2 Safety Instructions

3 Assembly Instructions

5 Back Cover

End

YPLa

Model Code: 3129, 3130, 3131 Oypla.com LLP / www.oypla.com

1 Front Cover

_

- 2 Safety Instructions
- 3 Assembly Instructions
 - 5 Back Cover

End



2. Continue to slide the poles into the section that is facing up until you no longer have the poles to do so. After this, pull the sleeve on the side of the sports net down onto the upper section of the created net frame.



3. Once done, pull the hook and cord found on the top pole through the hole seen in the pictures on the above right, making sure that the hook is attached to the cord so that the sports net stays up.



- 1 Front Cover
 - -
- 2 Safety Instructions
 - Assembly

3

Instructions

5 Back Cover

End

HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone:020 3600 22 55Email:cservice@oypla.comLive Chat:WWW.OYPLA.COM

CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION



AN OFFICIAL OYPLA BRANDED PRODUCT

OYPLa

Imported by Oypla.com LLP, Uxbridge, UX8 2FX

Model Code: 3129, 3130, 3131 Oypla.com LLP / www.oypla.com