



Out of this world savings.

User Manual

Model: **3140**



Netball Post

Contents

Safety Information	2
What's In The Box?	3
Assembly Instructions	4

Safety Information

Please ensure you read and fully understand instructions before use


















While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
 - Never carry out any alterations or modifications to this product.
 - This product is intended for outdoor use only.
 - After filling the base platform with a weighted substance, ensure that the plug is in correctly. Do not fill until the weighted substance is blocking the plughole.
 - Do not hang off the metal ring/pull the net post. Doing so, will cause the netball net post to fall down and could possibly break the product or injure you and/or others.
 - Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials. As these will damage the product.
 - An adult should assess the area that the netball net will be erected, to ensure there are no hazards.
 - Do not discard any of the packaging until you have checked that you have all parts and fittings as required.
 - Do not attempt to use the product without filling the base.
 - The height of the post should only be adjusted by an adult
 - The surface beneath the base must be smooth and free of gravel or other sharp objects.
 - Not suitable for use in severe weather conditions.
 - If product is damaged or has any defects, please contact cservice@oypla.com.
-

What's In The Box?

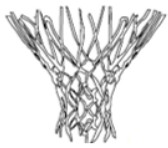 Please note that you will be referring to the below parts list during assembly

 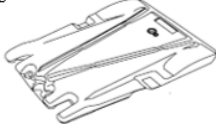If any of the below parts are missing or damaged, please contact our dedicated team at cservice@oypla.com.

A) Short Hex Bolt with Washer x2		1. Top Pole (x1) 	6. Wheels (x2) 
B) Long Hex Bolt with Washer x1		2. Centre Pole (x1) 	7. Hoop (x1) 
C) Small Hex Bolt with 2 Washers and Nut x4		3. Bottom Pole (x1) 	8. Net (x1) 
D) Socket Button Head with Washers and Nut x4		4. Supports (x2) 	9. Base (x1) 
E) Tension Knobs x4		5. Centre Pole (x1) 	10. Axle (x1) 
F) Hex Key x1			
G) Spanner x1			


Assembly Instructions

Please refer to the below information to help assemble your Oypla product

If you require assistance with the assembly of your Oypla product, please contact our dedicated team at cservice@oypla.com.



1. Base Assembly

Align one of the wheels (6) into the slot in the base (9). Have another person hold the bottom pole (3) in place and thread the axle (10) through the holes in the base and the second wheel.

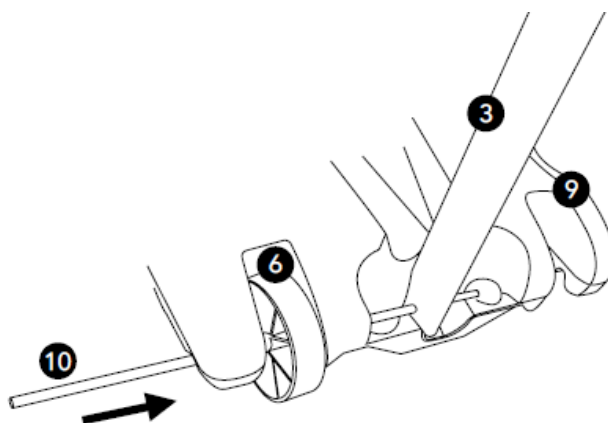

2. Base Supports

Align the pole supports (4) with the holes on the base and attach with four bolts (D) – do not fully tighten. Align the support poles with the bottom pole and secure with a bolt (B). Tighten all bolts once the supports are in the correct position.

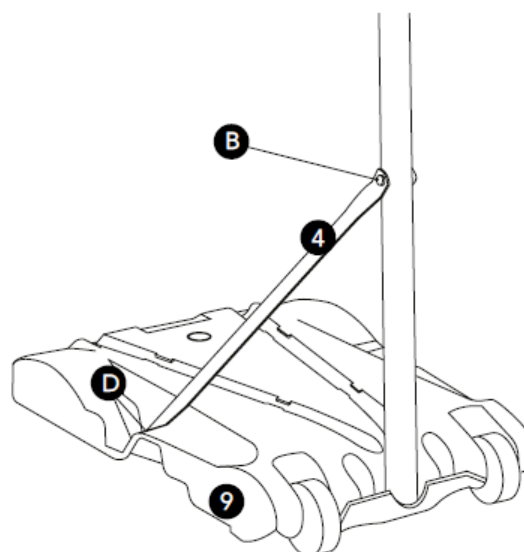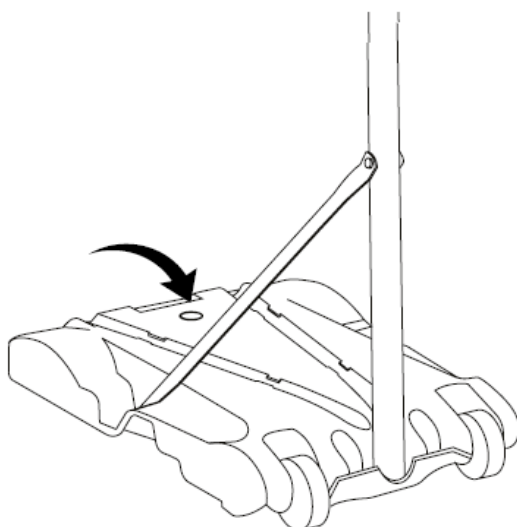


3. Base Setup

Have another person hold the base securely and then fill with either sand or water.


4. Pole Assembly


Slot the centre pole (2) over the bottom pole, ensuring the screw holes are aligned. Secure using two bolts (A).

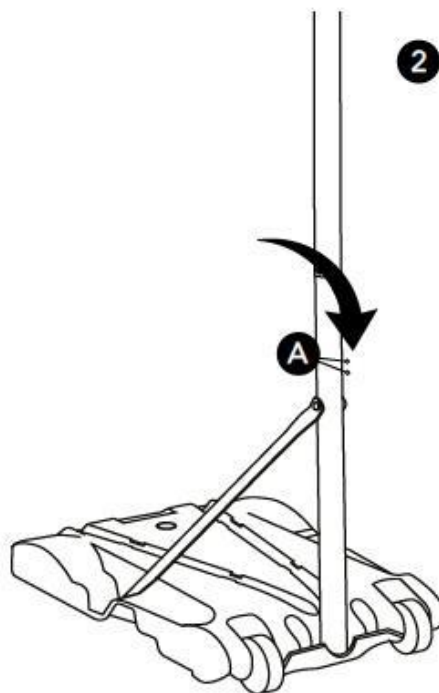

5. Pole Assembly


Slot the adjustable centre pole (5) over the centre pole, ensuring the screw holes are aligned. Insert two adjuster knobs (E) and tighten to secure into place.

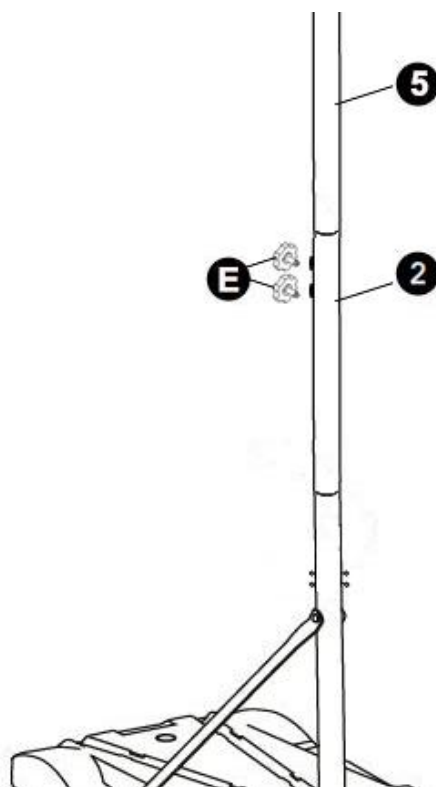

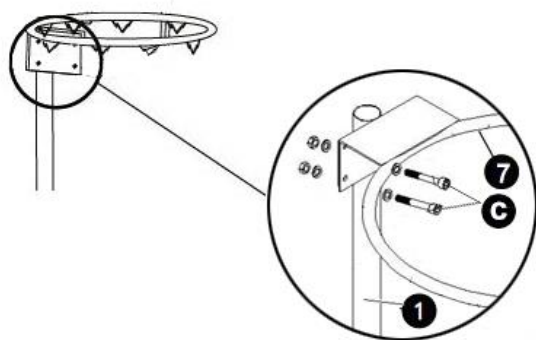

6. Hoop Assembly

Line up the plate of the hoop (7) with the slots on the top pole (1). Secure using four bolts (C).

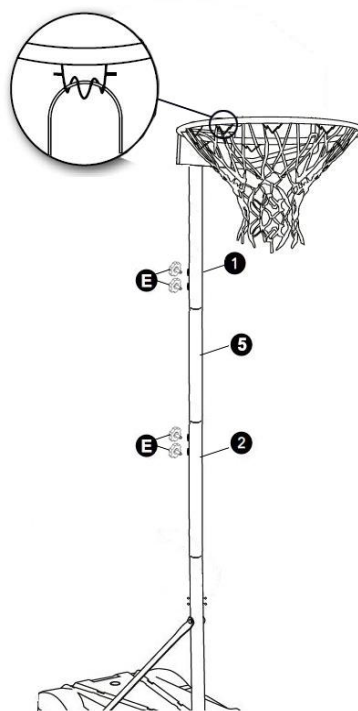

7. Final Assembly & Adjustment

Hook the net (8) over the loops. Slot the top pole into the adjustable centre pole, ensuring the screw holes are aligned. Insert two adjuster knobs and tighten to secure into place.

To adjust the height of the netball stand, loosen the adjuster knobs and slide the poles to the desired height. Re-tighten once the height is set.

Have a Question About Your Purchase?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55

Email: cservice@oypla.com

Live Chat: www.oypla.com

Consider the Environment!

By recycling the cardboard box in which this product was packed, you contribute towards helping the environment. If you see a recycling logo such as the below on the packaging, it can be recycled. If a recycling logo is not present, please check with your local authority before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

An Official Oypla Branded Product

Imported by Oypla.com LLP, Uxbridge, UB8 2FX

User Manual

Model Code: 3140

Oypla.com LLP / cservice@oypla.com