



Out of this world savings.

User Manual

Model: **3143**



24L Cooler Box

CE

**UK
CA**

Contents

Safety Information	2
What's In The Box?	3
Operating Instructions.....	3
Troubleshooting.....	4

Safety Information

Please ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
 - Do not carry out alterations or modifications to this product.
 - Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
 - This product is not intended for use by persons (including children) with reduced physical, sensory and mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by persons responsible for their safety.
 - Please ensure the sockets of the cords are inserted firmly. A loose fitting can result in the cord and sockets overheating and failing.
 - Do not switch the setting from cool to warm immediately. Change between the settings only after the cooler has been off for 30 minutes.
 - Avoid turning the cooler upside down.
 - Please note, raw food or seafood cannot be placed on this appliance directly. Packaging for this kind of food is required.
 - If the product is damaged or has any defects, please contact cservice@oypla.com
 - Clean only with a damp cloth. Do not use strong industrial cleaning substances, as these may damage the product.
 - Leaving the product outside exposed to weather, especially direct sun and rain, will speed up the weathering process. This can be slowed down by removing the product from these conditions.
 - Please ensure the 12V plug is disconnected from the DC socket after the engine is turned off.
 - Keep the appliance away from flammable items, and dampness, to prevent any electrical failure and/or fire.
 - Please unplug the 12V plug from the DC socket when the cooler is not in use.
 - Prevent any obstructions to the fan. If the fan becomes blocked, it can overheat and cause fire. Never cover with towels or cloths.
 - Children should be supervised to ensure they do not play with the appliance.
 - Do not use electrical appliances inside the food storage compartments.
 - This product is for domestic use only.
-

What's In The Box?

Please note that you will be referring to the below parts list during assembly

If any of the below parts are missing or damaged, please contact our dedicated team at cservice@oypla.com.

1 x Cooler Box	1 x 12V Power Cable	1 x Mains Cable & Plug
		

Operating Instructions

The below information is designed to help you with the operation of your Oypla product

If the product is damaged, defective or you require more information, please contact our dedicated team at cservice@oypla.com.

Functionality

This electric cool/hot box can bring you cool drinks in the summer and warm food in the winter. No matter whether on a long car journey, or outdoor hiking stuck in your car, you can enjoy plenty of drinks and foods at their optimum temperature. Not only can this product box be used in the car, it can also be used indoors, making transporting this cool/hot box easy due to its lightweight style.

It integrates dual functions of cooling and heating by employing a semiconductor, without compressor or cryogen. It has advantages of being free from pollution (no harmful gasses), small volume, light weight, portable, long service life and lowest power consumption.

Ideal Uses

Barbecues

Picnics

Road Trips

Fishing

Taxi Driving

Truck Driving

Camping Trips

Dorm Halls

Performance

For optimum cooling effect, we suggest using pre-chilled foods and drinks.

This cooler and warmer is not designed to heat cold food but to preserve hot foods at a warm temperature. It can warm to the maximum 50°C – 60°C.

Please note the appliance is not suitable for storing ice cream or to freeze food or beverages.

Operation Guide

First, make sure the switch at the side of the cooler and warmer is in OFF state, and then insert the plug of the power cord into the socket of the unit


Or, if you are using the cooler box in a vehicle, Insert the plug of the cigarette lighter into the cigarette lighter in the vehicle.

Cooling: set the power switch at the position of COOLING. The green indicator will be on and indicating the unit is in cooling mode.

Heating: set the switch at position of HEATING. The red indicator will be on indicating the unit is in heating mode.

Operating in Vehicles

Note that power is drawn from the engine. Simply insert the DC power cord attachment into the socket of the lighter in the vehicle.

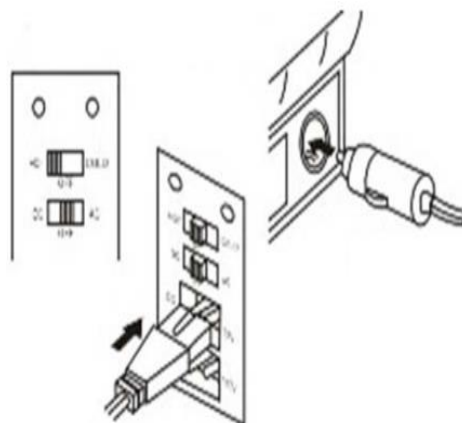

Operating via Plug Socket

Simply connect the AC power cord into the cooler box, and the plug into the plug socket on the wall.

Troubleshooting

For help with troubleshooting, please see the table on the following page

Issue	Probable Solution
The cooler box is not cooling or heating	Check if the fan is operational. If it is not, check that the connections are firmly in place. Use a non-metallic brush to clean the connections. Check that the fuse has not blown and that the power is switched on
The cooler box does not cool and the fan is not rotating	Contact cservice@oypla.com for advice as the motor may be at fault
The cooler box does not cool but the fan is rotating as normal	Contact cservice@oypla.com as the cooling system may be at fault
The cooler box is not working when connected to an AC power socket	Contact cservice@oypla.com as the power system may be at fault

Have a Question About Your Purchase?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55

Email: cservice@oypla.com

Live Chat: www.oypla.com

Consider the Environment!

By recycling the cardboard box in which this product was packed, you contribute towards helping the environment. If you see a recycling logo such as the below on the packaging, it can be recycled. If a recycling logo is not present, please check with your local authority before recycling.



Environmental Protection

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

An Official Oypla Branded Product

Imported by Oypla.com LLP, Uxbridge, UB8 2FX

User Manual

Model Code: 3143

Oypla.com LLP / cservice@oypla.com