

# HOME

THANK YOU FOR YOUR ORDER

## Contents

- 1 Front Cover  
-
- 2 Safety  
Instructions  
-
- 3 Assembly  
Instructions  
-
- 3 Cleaning and  
Maintenance  
-
- 4 Back Cover

End



## Electric Clothes Airer

## Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
3	Assembly Instructions
-	-
3	Cleaning and Maintenance
-	-
4	Back Cover

End


# Safety Instructions


## Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Never carry out any alterations or modifications to this product.
- This product is not a toy, and is only to be used for its designated purpose.
- This product is intended for indoor use only.
- This product is for domestic use only.
- Only use this product on stable, level and dry ground.
- Do not lean on the product.
- Keep the product out of the reach of children and pets.
- This product is not intended for use by persons (including children) with reduced physical, sensory and mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by persons responsible for their safety.
- Do not use the product near any source of water.
- This product is not to be used for prolonged periods of time unsupervised, for example overnight use.
- When the appliance is not in use, always unplug from the mains socket.
- Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
- Do not use the product near flammable materials or liquids.
- To protect against electrical shock, do not immerse cord, plug or any part of this appliance in water or any other liquid.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product. Make sure the product is off, unplugged from the socket and been left for five minutes to remove the risk of electrical shock and to allow the product to cool down.
- If the product is damaged or has any defects, please contact [cservice@oypla.com](mailto:cservice@oypla.com).

# Warnings

 KEEP WATER AND FLAMMABLE LIQUIDS/MATERIALS AWAY FROM THE PRODUCT. THIS COULD LEAD TO PRODUCT FAILURE AND/OR PERSONAL INJURY.

 TURN OFF PRODUCT AND UNPLUG AT THE WALL TO ALLOW PRODUCT TO COOL BEFORE PACKAGING AWAY/MOVING.

## Contents

1	Front Cover
	-
2	Safety Instructions
	-
3	Assembly Instructions
	-
3	Cleaning and Maintenance
	-
4	Back Cover

End

# Assembly Instructions

## Parts List:

- If you are missing any of the below parts, please contact [cservice@oypla.com](mailto:cservice@oypla.com)
- Please be aware that you will be referring to this parts list throughout the assembly process.

### Assembling the Extendable Electric Clothes Horse

1. Open the box and take the product out from the box.
2. Place the product on a stable and flat surface.
3. Now flip the product over upside down.
4. Slide the support leg towards the opposite side of the drying rail. This part may require two people as the support leg maybe stiff.
5. Once the legs are securely in place, check over the product thoroughly before use.

### Cleaning & Storage

- The appliance needs only an external regular cleaning. After use and before cleaning always switch the appliance off, disconnect from the power source and wait until it has cooled completely. Clean the grills from dust.
- Close the product using the handles and only when it is cold. Store it in a cool dry place with caution. Ensure that the product will not fall over once it has been stored.

### Care & Maintenance

#### Warning:

- If the product gets in contact with clothes that have colours that easily run this will cause the product to bleach the original colour. It is recommended that these items of clothing are wrapped to protect them, in a towel for example, before they are placed on the product.
- Put the clothes on the heated bars with care, this is to avoid the risk of burns.
- This product is meant to dry clothes washed with only water. If soap or detergent is not well removed burn-like stains can appear on tissues. This is a colour transformation caused by the heat of the product.

# Contents

- 1 Front Cover  
-
- 2 Safety  
Instructions  
-
- 3 Assembly  
Instructions  
-
- 3 Cleaning and  
Maintenance  
-
- 4 Back Cover  
  
End

## Technical Data

Voltage: 220-240V ~ 50Hz 120W



## HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

**Telephone:** 020 3600 22 55  
**Email:** [cservice@oypla.com](mailto:cservice@oypla.com)  
**Live Chat:** [WWW.OYPLA.COM](http://WWW.OYPLA.COM)

## CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

# OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

## ENVIRONMENTAL PROTECTION

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



Imported by Oypla.com LLP, Hangar 1, Upwood Air Park, Ramsey, Cambs, PE26 2RA

Model Code: 3155

Oypla.com LLP / [www.oypla.com](http://www.oypla.com)