



Mini Oven w/ Hot Plates and Grill

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- This product is intended for indoor use only.
- Never carry out any alterations or modifications to this product.
- Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
- When the appliance is not in use, always unplug from the mains socket.
- To protect against electrical shock, do not immerse cord, plug or any part of this appliance in water or any other liquid.
- This product is not intended for use by persons (including children) with reduced physical, sensory and mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by persons responsible for their safety.
- Never leave the mini oven unattended when in use.
- Never touch hot surfaces with your bare hands. Use oven gloves when removing hot items from the oven.
- Fires may be caused if the mini oven is covered by, or touching flammable materials such as; tea towels, paper towels, paper or curtains. Do not store flammable materials on or near the mini oven.
- Do not attempt to overflow the mini oven using oversized foods or baking ware as these may cause a fire.
- This product has a max output of 2900W.
- If the product is damaged or has any defects, please contact cservice@oypla.com

DO NOT ATTEMPT TO OVER FILL THE 26L LIMIT

Operating Instructions

Parts List:

If you are missing any of the below parts please contact cservice@oypla.com

Please be aware that you will be referring to this parts list throughout the assembly process.

- A** LEFT HOTPLATE
- B** RIGHT HOTPLATE
- C** OVEN THERMOSTAT
- D** LOWER OVEN ELEMENT SWITCH
- E** LEFT HOTPLATE CONTROL
- F** TOP OVEN ELEMENT SWITCH
- G** RIGHT HOTPLATE CONTROL



ACCESSORIES



How to use the Oven

To turn the oven elements on or off, flick the lower oven element switch (D) and the top oven element switch (F) on the right hand side of the mini oven.

If you only want to turn on the top elements, flip the top oven element switch (F) and if you only want to turn on the lower elements, flip the lower oven element switch (D).

If you require both the top and bottom elements for maximum heat, flip both switches (D and F) into the 'ON' position.

You control the temperature of the oven using the oven thermostat (C).

To turn the oven off, return the switches to the 'OFF' position.

How to use the Hotplates

The hotplates are controlled by control dials (E) and (G) on the right hand side of the mini oven.

To turn on the left hotplate (A), rotate the left hotplate control (E) clockwise to the required temperature setting.

To turn on the right hotplate (B), rotate the right hotplate control (G) clockwise to the required temperature setting.

Make sure to use pans that are a similar diameter to the hotplate and that the pans have flat bottoms to ensure good heat transfer.

When you have finished using the hotplates, return the dials to the 'OFF' position.

Using your Mini Oven to Grill

1. Insert the shelf at the required level.
2. Flip the top oven element switch (F) into the 'ON' position.
3. Set the oven to the required temperature by using the oven thermostat (C).
4. Place the food to be grilled on the shelf.
5. When you have finished using the grill be sure to flip the top oven element switch (F) into the 'OFF' position.

Using your Mini Oven to Roast or Bake

1. Inset the shelf at the required level.
2. Place food onto the baking tray and insert onto the shelf.
3. Flip both the lower oven element switch (D) and the top oven element switch (F) into the 'ON' position.
4. Set the oven to the required temperature by using the oven thermostat (C).
5. When you have finished using the Mini Oven, flip both switches into the 'OFF' position.

You can place the food to cook/bake directly on the shelf if required. When doing this ensure that you place the baking tray in the lowest position in the oven to protect the elements from drips and fat.

Cleaning and Care

The oven should be cleaned regularly and any food deposits removed to prevent an accumulation of grease and to avoid unpleasant odours. Failure to maintain the oven in a clean condition can lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

1. Turn off the mini oven and remove the power plug from the wall socket.
2. Remove the shelf and baking/drip tray and wash them in hot soapy water.
3. Clean the outside of the mini oven with a damp cloth or sponge. Do not use any abrasive cleaners or sharp utensils to clean the mini oven as these may scratch the surface and/or weaken it.
4. Make sure to dry the shelf and baking/drip tray before placing them inside the oven.
5. Before plugging the Mini Oven back into the socket, ensure that the plug hasn't become wet during the cleaning process. If it has, dry the plug before putting it in the socket and turning it on.

Please retain a copy of all instructions for future consultation.



An Official Oypla Branded Product



Imported into the EU by Oypla.com LLP, Uxbridge, UB8 2FX

Environmental Protection

Products bearing the symbol shown above means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.