

OYPOLEATM

LEISURE



Outdoor Camping Smoker

USER MANUAL Model No: 3227

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Never carry out any alterations or modifications to this product.
- This product is not a toy, and is only to be used for its designated purpose.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product
- This product contains small parts that could be a choking hazard if swallowed. Keep these items away from children.
- Before using the product, make sure all parts are in place and that everything is in order, and checked periodically by an adult.
- Never leave the product unattended, especially around children and/or pets.
- Leaving the product outside exposed to weather, especially direct sun, rain and salt air, will speed the weathering process. This can be slowed by removing the product from these conditions, or covering it with a suitable cover.
- Do not discard any of the packaging until you have checked that you have all of the parts required.
- Ensure all food is properly cooked before eating.
- Always allow the smoker adequate time to cool before cleaning.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Operating Instructions

- Before use, ensure all parts are clean. Preheat to approximately 100 degrees.
- The stand must be placed on a level and non-flammable surface.
- Place the smoker on the surface, mentioned above.
- The smoking wood chips should be distributed evenly at the bottom, with the drip tray placed on top.
- Put the food on the grill plate, and slide the lid in place to close.
- Add white spirit to the cup.
- If you wish to adjust heat, this can be achieved by turning the cup arm.
- Depending on the size of the food item, it will be ready in approximately 15-30 minutes.

HAVE A QUESTION ABOUT YOUR PURCHASE?

OUR DEDICATED CUSTOMER SERVICES TEAM ARE HAPPY TO HELP
CONTACT THEM VIA:

TELEPHONE: 020 3600 2255

EMAIL: cservice@oypla.com

LIVE CHAT: www.oypla.com

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

An Official OYPLA Branded Product

Imported by Oypla.com LLP, Uxbridge, UB8 2FX

USER MANUAL Model No: 3227