



**Out of this world savings.**

---

## **User Manual**

Model: **3233**

---



**15m Portable Airer**

---

---

# Safety Information

## Please ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- 
- Never carry out any alterations or modifications to this product.
  - This product is not a toy, and is only to be used for its designated purpose.
  - This product is intended for outdoor use only.
  - Keep fingers, loose clothing and hair away when folding the product.
  - If the product is damaged or has any defects, please contact [cservice@oypla.com](mailto:cservice@oypla.com)
  - Do not use for any purpose other than to hang and dry washing.
  - Do not use your clothesline if parts are worn or damaged.
  - Clean only using a damp cloth. Do not use harsh chemicals or substances, as these may damage the product.
  - Make sure that the product is used in an open space.
  - Leaving the product outdoors exposed to weather, especially direct sun (for extended periods of time), rain and salt air, will speed the weathering process. This can be slowed by removing the product from these conditions, or covering it with a suitable cover.
  - Do not allow children or pets to swing on the clothesline or items of laundry.
  - Ensure when raising and lowering your clothesline that bystanders (in particular children) are standing well clear.
  - Do not allow the frame to lower in an uncontrolled manner as damage or injury may result.

### Setting up the Ainer

1. To assemble the product, slide the extendable ainer into the base, ensuring that it goes all the way in and is secured into the bottom of the base.
2. To extend the ainer outwards push the section that is connected to all four of the extending arms upwards. Do this until the section can't be moved anymore. After this, you are free to use the product. Ensure it is locked in place before putting clothes on the product.

---

## Have a Question About Your Purchase?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55  
Email: [cservice@oypla.com](mailto:cservice@oypla.com)  
Live Chat: [www.oypla.com](http://www.oypla.com)

---

## Consider the Environment!

By recycling the cardboard box in which this product was packed, you contribute towards helping the environment. If you see a recycling logo such as the below on the packaging, it can be recycled. If a recycling logo is not present, please check with your local authority before recycling.



---

**PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION**

An Official Oypla Branded Product  
Imported by Oyplacom LLP, Uxbridge, UB8 2FX

**User Manual**  
Model Code: 3233  
[Oypla.com](http://Oypla.com) LLP / [cservice@oypla.com](mailto:cservice@oypla.com)