



Clothes Rail Cover

USER MANUAL Model No: 3313, 3440, 3441, 3709

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Make sure all fastenings are tightly in place and that everything is in order before using the product. This should be checked periodically by an adult.
- Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
- This product is not a toy, and is only to be used for its designated purpose.
- Do not carry out alterations or modifications to this product.
- Close supervision is needed when appliance is near children.
- This product is intended for indoor use only.
- If the product is damaged or has any defects, please contact cservice@oypla.com

HAVE A QUESTION ABOUT YOUR PURCHASE?

OUR DEDICATED CUSTOMER SERVICES TEAM ARE HAPPY TO HELP CONTACT THEM VIA:

TELEPHONE: 020 3600 2255 EMAIL: cservice@oypla.com LIVE CHAT: www.oypla.com

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION



Imported by Oypla.com LLP, Uxbridge, UB8 2FX USER MANUAL Model No: 3313, 3440, 3441, 3709