

OYPLA™

HOME

THANK YOU FOR YOUR ORDER



Extendable Electric Clothes Horse

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Never carry out any alterations or modifications to this product.
- This product is not a toy, and is only to be used for its designated purpose.
- This product is intended for indoor use only.
- This product is for domestic use only.
- Only use this product on stable, level and dry ground.
- Do not lean on the product.
- Keep the product out of the reach of children and pets.
- This product is not intended for use by persons (including children) with reduced physical, sensory and mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by persons responsible for their safety.
- When the appliance is not in use, always unplug from the mains socket.
- Do not leave this airer on for extended periods of time unsupervised, for example overnight.
- Never fully cover the airer with a towel or other large item, unless it is by the correct cover.
- Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
- Do not use the product near any source of water.
- Do not use the product near flammable materials or liquids.
- To protect against electrical shock, do not immerse cord, plug or any part of this appliance in water or any other liquid.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product. Make sure the product is off, unplugged from the socket and been left for five minutes to remove the risk of electrical shock and to allow the product to cool down.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Operating Instructions

Parts List:

If you are missing any of the below parts please contact cservice@oypla.com



COMPONENT PARTS

- A. Clothes support bars
- B. ON/OFF switch
- C. Foldable aluminum support

⚡ WARNING ⚡

To reduce the risk of fire, electrical shock, or injury when using your electric clothes drying rail, follow these basic precautions:

- Read all instructions before using the extendable electric clothes horse.
- Never allow children to operate or play with the extendable electric clothes horse.
- Never clean the extendable electric clothes horse with flammable fluids. Fumes can create a fire hazard or, at the worst, an explosion.
- Do not store gasoline or any other flammable vapours and liquids in the vicinity of this product.

Operating the Extendable Electric Clothes Horse

1. Open the box and take the product out from the box.
2. Place the product on a stable and flat surface.
3. Begin by folding the extending sections outwards.
4. Now flip the product over upside down.
5. Slide the support leg towards the opposite side of the drying rail. This part may require two people as the support leg maybe stiff.
6. Once the legs are securely in place, check over the product thoroughly before use.

Cleaning & Storage

- The appliance needs only an external regular cleaning. After use and before cleaning always switch the appliance off, disconnect from the power source and wait until it has cooled completely. Clean the grills from dust.
- Close the product using the handles and only when it is cold. Store it in a cool dry place with caution. Ensure that the product will not fall over once it has been stored.

Care & Maintenance

Warning:

- If the product gets in contact with clothes that have colours that easily run this will cause the product to bleach the original colour. It is recommended that these items of clothing are wrapped to protect them, in a towel for example, before they are placed on the product.
- This product is meant to dry clothes washed with only water. If soap or detergent is not well removed burn-like stains can appear on tissues. This is a colour transformation caused by the heat of the product.
- Put the clothes on the heated bars with care, this is to avoid the risk of burns.

Technical Data

Voltage: 220-240V ~ 50Hz 230W

HAVE A QUESTION ABOUT YOUR PURCHASE?

OUR DEDICATED CUSTOMER SERVICES TEAM ARE HAPPY TO HELP
CONTACT THEM VIA:

TELEPHONE: 020 3600 2255

EMAIL: cservice@oypla.com

LIVE CHAT: www.oypla.com

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION



OYPLA.COM

An Official OYPLA Branded Product

Environmental Protection

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



Imported by Oypla.com LLP, Uxbridge, UB8 2FX

USER MANUAL Model No: 3334