



Out of this world savings.

---

## User Manual

Model: 3349

---



# Double Hot Plate

---

CE

UK  
CA

---

# Contents

Safety Information .....	2
Operating Instructions.....	3

---

## Safety Information

### Please ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- 
- Close supervision is necessary when the product is used by or near children. Do not allow children to use it as a toy.
  - Do not operate any product with a damaged cord or plug, or after the product malfunctions.
  - To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid other than those necessary for correct operation of the product.
  - Never operate electrical appliance in immediate vicinity of water sources.
  - Switch off or unplug from outlet when not in use and before cleaning.
  - Do not touch the surfaces or the hot plate when in operation.
  - Do not leave the product unattended when switched on.
  - Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
  - Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
  - Clean the painted surface with a damp soft cloth and mild household cleaning powder.
  - To clean the circular hot plate can be removed with household cleaning powder. Wait to cool down before cleaning.
  - Utensils with convex, concave or uneven bottoms should not be used.
  - This product is not a toy, and is only to be used for its designated purpose.
  - If the product is damaged or has any defects, please contact [cservice@oypla.com](mailto:cservice@oypla.com)
  - This product is for domestic use only.
  - **Warning! Leaving burnt food or residue on the glass hobs or the ceramic coating can create a risk of cracking. To prevent this, ensure spillages are cleared and no food is left on the product.**

---

## Operating Instructions

The below information is designed to help you with the operation of your Oypla product

If the product is damaged, defective or you require more information, please contact our dedicated team at [cservice@oypla.com](mailto:cservice@oypla.com).

---

---

### Before First Use

Please note that before you use your hot plate for the first time, it is best to turn the hot plate on at the highest setting for 3-5 minutes, to condition the protective coating. You may notice an aroma; this is perfectly normal – it is the manufacturing oils.

### Ideal Operation

For the most efficient usage of your double hot plate, the diameter of the cooking utensils used should have a solid base with a diameter of approx. 15-17cm for the smaller hob and 18-20cm for the larger hob.

### Controls

Turn the dial to the recommended position marked to achieve the desired temperature:

- 1 – For simmering of delicate foods and thickening sauces
- 2 – Slow cooking
- 3 – For simmering larger volumes
- 4 – To bring all dishes to a rapid heat
- 5 – To bring to a boil

Note that the indicator light will switch off when the hot plate reaches the desired temperature – it will then cycle on and off to maintain the temperature.

---

## Have a Question About Your Purchase?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55

Email: [cservice@oypla.com](mailto:cservice@oypla.com)

Live Chat: [www.oypla.com](http://www.oypla.com)

---

## Consider the Environment!

By recycling the cardboard box in which this product was packed, you contribute towards helping the environment. If you see a recycling logo such as the below on the packaging, it can be recycled. If a recycling logo is not present, please check with your local authority before recycling.



---

## Environmental Protection

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge.



---

**PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION**

An Official Oypla Branded Product

Imported by Oypla.com LLP, Uxbridge, UB8 2FX

**User Manual**

Model Code: 3349

[Oypla.com](http://Oypla.com) LLP / [cservice@oypla.com](mailto:cservice@oypla.com)