

OYPLA™

GARDEN

THANK YOU FOR YOUR ORDER



4 Tier Mini Greenhouse

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Make sure all fastenings are tightly in place and that everything is in order before using the product. This should be checked periodically by an adult.
- This product is intended for outdoor use only.
- Do not discard any of the packaging until you have checked that you have all parts and fittings required.
- This product is not a toy, and is only to be used for its designated purpose.
- Children should be supervised to ensure they do not play with the product.
- Do not use in strong winds.
- Do not place this product near screws, staples, hooks, nails etc. Try to keep away from heat sources.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances.
- To achieve best results, choose a place in maximum light.
- In order to avoid damages to the product, do not place under overhanging trees.
- Avoid placing in areas that are exposed to strong winds.
- Only use this product on stable, level and dry ground.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Assembly Instructions

Parts List:





 
 
Please check you have all parts below before attempting to assemble this product.



If you are missing any of the below parts, please contact Oypla customer services:

cservice@oypla.com

Assembly Instructions

1. Assemble as shown (Fig.1). Start from the base and push the uprights (B) and cross poles (C) firmly into the brackets (A).
2. Push the roof supports (D) firmly into the brackets.
3. Fit the shelves (E) as shown.
4. Once assembled, slide the cover (F) over the frame and secure with ties in the bottom corners (Fig. 2).

A		X10
B		X16
C		X12
D		x2
E		x4
F		x1

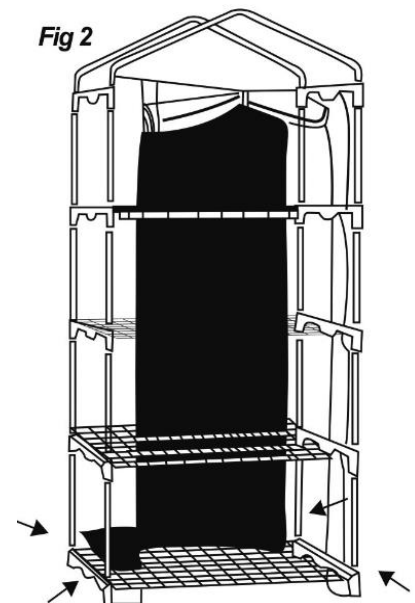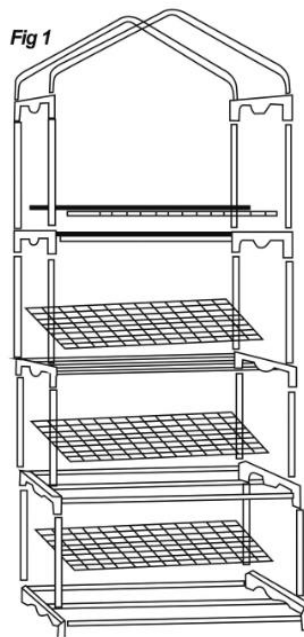

HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55
Email: cservice@oypla.com
Live Chat: WWW.OYPLA.COM

CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

Imported by Oypla.com LLP, Uxbridge, UB8 2FX

USER MANUAL Model No: 3392