

User Manual

Model Code: 3394/3710

THANK YOU FOR YOUR ORDER

Contents

1 Front Cover

-

2 Safety
Instructions

_

3 Cleaning and Maintenance

-

3 TechnicalInformation

_

4 Back Cover

End





Energy Saving Desk Lamp

Model Code: **3394/3710**

Oypla.com LLP / www.oypla.com

Contents

Front Cover

-

1

2 SafetyInstructions

-

3 Cleaning and Maintenance

-

3 TechnicalInformation

-

4 Back Cover

End

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- Never carry out alterations or modifications to this product.
- This product is intended for indoor use only.
- Do not use this product if the power cable, or any part of the product, is damaged.
- Only use this product on a stable, level and dry surface.
- This appliance can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved.

- Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
- To protect against electrical shock, do not immerse the cord, plug, or any part of this appliance into water or any other liquids.
- Do not leave the product switched on for extended period of times, as this can cause the bulb to become hot, decreasing the overall lifespan of the bulb.
- Do not leave this product unsupervised.
 If you have to leave the surroundings of the product, always switch it off first.
- Ensure the power cord is left in a place where it is not a tripping risk.
- If the product is damaged or defective, please contact cservice@oypla.com

Warnings

A Beware of overheating. Do not leave this lamp on for extended periods of time, overnight for example.

⚠ Keep this lamp away from all liquids. Failure to do so exposes the user to electrical shock.



Contents

Front Cover

Cleaning & Maintenance

Please refer to the instructions below in regards to cleaning and maintaining your product.

- Clean only using a dry or slightly damp cloth. Do not use any harsh or industrial cleaning substances, or any abrasive materials, as these may damage the product.
- If using a damp cloth, ensure no water enters the body of the lamp. If it does, ensure the lamp is completely dry before using again.
- Ensure the lamp is switched off before attempting any cleaning.
- Ensure that the lamp has cooled down completely before attempting any cleaning.
- Always unplug the plug from the socket outlet before attempting any cleaning.

Instructions -

Safety

1

2

3 Cleaning and Maintenance

-

3 TechnicalInformation

-

4 Back Cover

End

Technical Information

Voltage: 220-240VHertz: 50/60HzWattage: 27W

Light Temperature: 6400K

360 Degree "Goose Neck" Design

• Bulb: FML-27W



Contents

1 Front Cover

-

2 Safety
Instructions

_

3 Cleaning and

Maintenance

-

3 Technical

Information

-

4 Back Cover

End

HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55

Email: cservice@oypla.com
Live Chat: WWW.OYPLA.COM

CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.









PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLa.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

ENVIRONMENTAL PROTECTION

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.

Imported by Oypla.com LLP, Uxbridge, UB8 2FX

