

OYPLA™

HOME

THANK YOU FOR YOUR ORDER



16" Wall Fan

USER MANUAL Model No: 3434

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

When using electrical products, especially when children are present, basic, safety precautions should always be followed, including the following:

1. Read all instructions.
 2. Disconnect the power plug before dismantling, assembling or before cleaning.
 3. Avoid touching mobile parts of the fan.
 4. Make sure the fan is on a dry and even surface.
 5. Never insert fingers, pencils or any other objects through the guards whenever the power plug is connected, especially while running.
 6. The appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
 7. This is not a toy. Do not play with the fan.
 8. Do not use the appliance for any other purpose than its intended use.
 9. The fan must not be used if the guards are not fastened according to instructions.
 10. When the power cord is damaged, it must be replaced by a qualified person in order to avoid a hazard.
 11. Do not use your appliance with an extension cord unless it has been checked and tested by a qualified electrician or electrical supplier.
- Keep instructions for future reference.

CARE AND MAINTENANCE

1. Always disconnect the cord from the electrical outlet when cleaning your fan.
2. Light accumulated dust may be removed from the fan with a soft cloth or vacuum cleaner using the dusting brush attachment.
3. Wipe the exterior surfaces of the fan occasionally with a cloth moistened(not dripping wet)with a mild soap solution. Dry the case thoroughly with a soft dry cloth before operating the fan.
4. Avoid the use of gasoline, benzene, thinner etc as they may result in damage to the fan.
5. Store the fan in a clean dry place when not in use.

IMPORTANT SAFETY INSTRUCTIONS

⚡ WARNING ⚡

To Reduce The Risk of Fire or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device and follow these basic precautions:

- Read all instructions before using the fan.
- Never allow children to operate, play with, the fan.
- Never clean fan parts with flammable fluids. The fumes can create a fire hazard or explosion.
- Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other fan. The fumes can create a fire hazard or explosion.
- UNPLUG OR DISCONNECT THIS FAN FROM THE POWER SUPPLY BEFORE SERVICING.


-Save these instructions-

Operating Instructions

Parts List:

If you are missing any of the below parts please contact cservice@oypla.com

Please be aware that you will be referring to this parts list throughout the assembly process.

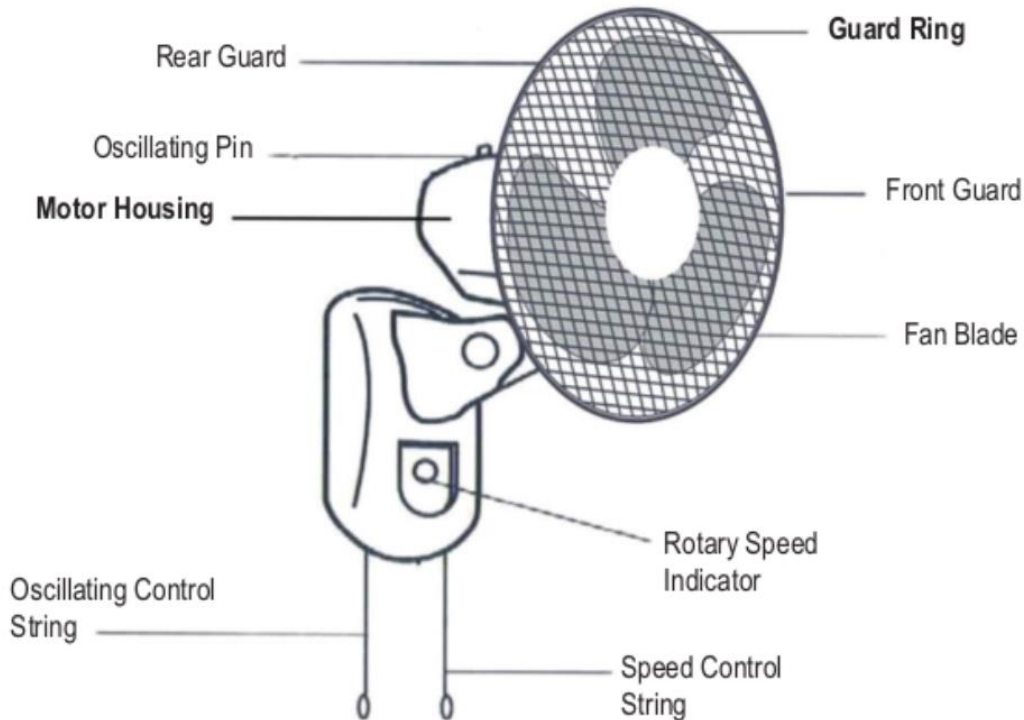

1. Remove all items of packaging from the fan.
2. Remove the locking nut from the motor shaft.
3. Position the rear guard over the motor shaft, ensuring that the notches are correctly aligned and then secure with the locking nut.

4. Align the fan blade with the flat part on the motor shaft and secure by tightening the blade cap by turning counter-clockwise.
5. Attach the front guard centre to the middle of the rear guard and secure by pushing the guards together until they click into position.
6. Tighten the locking screw.

Fan Direction Adjustment

1. Do not attempt to make any adjustment to the direction of the grille and fan assembly until the fan has been turned off and unplugged from the socket.
2. To adjust the direction of the fan, hold the grille and gently tilt the fan until the desired position is reached.
3. Plug the fan back into the socket and turn the fan on.

Operating Instructions

1. Use in a dry place, free of excessive humidity and water.
2. To set the fan in motion simply pull the control string until you reach the desired speed. The speed selected will be display on the rotary speed indicator
0 = OFF 1 = LOW 2 = MEDIUM 3 = HIGH
3. Pull the oscillating control string once to make the fan oscillate.
4. Pull the string again to stop the fan oscillating.

⚡ WARNING ⚡

To reduce the risk of fire, electrical shock, or injury when using this product, follow these basic precautions:

- Read all instructions before using the product.
- Never allow children to operate or play with the product.
- Do not immerse the product in water.

HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55
Email: cservice@oypla.com
Live Chat: WWW.OYPLA.COM

CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

ENVIRONMENTAL PROTECTION

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



Imported by Oypla.com LLP, Uxbridge, UB8 2FX



USER MANUAL Model No: 3434