

OYPLA™

HOME

THANK YOU FOR YOUR ORDER



# 4 Bottle Spirit Drink Dispenser

# Safety Instructions

## **Notice: Ensure you read and fully understand instructions before use**

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- Never carry out any alterations or modifications to this product.
- This product is intended for indoor use only.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product.
- If the product is damaged or has any defects, please contact [cservice@oypla.com](mailto:cservice@oypla.com)
- Never drink and drive.
- Always drink responsibly.
- Only use this product on stable, level and dry surface.
- Make sure bottles are secure before use.
- This product is for domestic use only.
- If using product for alcoholic use please drink responsibly ([www.drinkaware.co.uk](http://www.drinkaware.co.uk))

# Assembly Instructions

## Parts List:

Please check you have all parts below before attempting to assemble this product.

If you are missing any of the below parts, please contact Oypla customer services:

[cservice@oypla.com](mailto:cservice@oypla.com)

4 Bottle Spirit Drink Dispenser	Cap Tool
 <p data-bbox="389 1317 418 1361">1</p>	 <p data-bbox="1136 1317 1165 1361">1</p>




1. Locate the cap at the top of the drink dispenser. Then fully unscrew and take the cap off.

2. Lift the dispenser off the main stand. Now rotate the dispenser so that the holders are at the top, then slot the dispenser back onto the main stand.



3. Place the screw back onto the main stand hole and tighten using the cap tool.

4. Locate the pin next to any of the optics. Then pull the pin down until it stops and pull the optic from its slot.

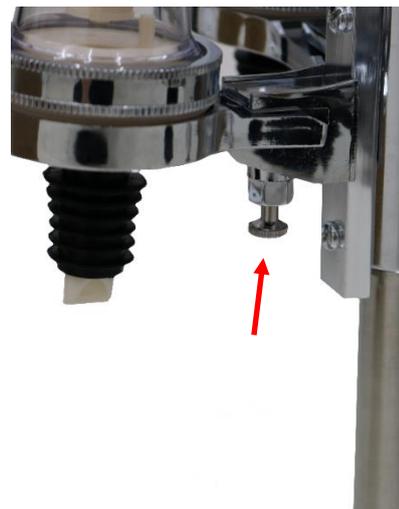

5. Keeping the pin pulled down slot the optic back in so that the optic is correctly orientated (as picture to right) then release the pin and ensure the optic is locked in place.  
Repeat step 4 and 5 for all the optics.



## HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55  
Email: [cservice@oypla.com](mailto:cservice@oypla.com)  
Live Chat: [WWW.OYPLA.COM](http://WWW.OYPLA.COM)

## CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

# OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

Imported by Oypla.com LLP, Uxbridge, UB8 2FX

**USER MANUAL Model No: 3451**