

User Manual

Model: **3455**



Wire Tensioner

Safety Information

Please ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.


- This product is not a toy, and is only to be used for its designated purpose.
- This product is intended for outdoor use only.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product.
- If at any time during activity you feel faint, dizzy, experience pain, stop and consult your physician or doctor.
- Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
- Warning! Be very careful not to trap loose hair, jewellery or clothing in the tensioner. Doing so may cause personal injury.

- Never carry out any alterations or modifications to this product.
- Make sure all fastenings are tightly in place and that everything is in order before using the product. This should be checked periodically by an adult.
- Leaving the product outside exposed to weather, especially direct sun, rain and salt air, will speed the weathering process. This can be slowed by removing the product from these conditions, or covering it with a suitable cover.
- If the product is damaged or has any defects, please contact cservice@oypla.com.

What's In The Box?

Please note that you will be referring to the below parts list during operation

If any of the below parts are missing or damaged, please contact our dedicated team at cservice@oypla.com.

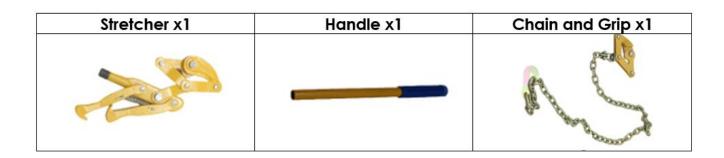

Assembly Instructions

Please refer to the below information to help assemble your Oypla product

If you require assistance with the assembly of your Oypla product, please contact our dedicated team at cservice@oypla.com.

1. Connect the handle to the stretcher by turning the handle clockwise to screw the handle on. Make sure the handle is secure before use.



2. Insert the chain into the teeth of the stretcher. Please see image below for help.



Continued on Next Page

3. Feed the wire through the mouth of the grip and open then open the grip to bite the wire and secure it. Please see image below for guidance.



Have a Question About Your Purchase?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55 Email: cservice@oypla.com Live Chat: www.oypla.com

Consider the Environment!

By recycling the cardboard box in which this product was packed, you contribute towards helping the environment. If you see a recycling logo such as the below on the packaging, it can be recycled. If a recycling logo is not present, please check with your local authority before recycling.









PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

An Official Oypla Branded Product Imported by Oypla.com LLP, Uxbridge, UB8 2FX