



User Manual

Model Code: 3455

THANK YOU FOR YOUR ORDER

Contents

1 Front Cover

-

2 Safety

Instructions

-

3 Assembly Instructions

-

4 Back Cover

End



Chain Tensioner

OYPLa

Model Code: 3455

Oypla.com LLP / www.oypla.com

Contents

1 Front Cover

_

2 SafetyInstructions

-

3 AssemblyInstructions

-

4 Back Cover

End

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- This product is intended for outdoor use only.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product.
- If at any time during activity you feel faint, dizzy, experience pain, stop and consult your physician or doctor.
- Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.

- Never carry out any alterations or modifications to this product.
- Make sure all fastenings are tightly in place and that everything is in order before using the product. This should be checked periodically by an adult.
- Leaving the product outside exposed to weather, especially direct sun, rain and salt air, will speed the weathering process.
 This can be slowed by removing the product from these conditions, or covering it with a suitable cover.
- If the product is damaged or has any defects, please contact <u>cservice@oypla.com</u>.

Assembly Instructions

Parts List:

- If you are missing any of the below parts, please contact cservice@oypla.com
- Please be aware that you will be referring to this parts list

Stretcher	Handle	Chain and Grip
1	1	1



Contents

1 Front Cover

-

SafetyInstructions

_

3 AssemblyInstructions

_

4 Back Cover

End

Connect the handle to the stretcher by turning the handle clockwise to screw the handle on. Make sure the handle is secure before use.



2 Insert the chain into the teeth of the stretcher. Please see image below for help.



Feed the wire through the mouth of the grip and open then open the grip to bite the wire and secure it. Please see image below for guidance.



Contents

1 Front Cover

-

2 Safety

Instructions

-

3 Assembly

Instructions

-

4 Back Cover

End

HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55 Email: cservice@oypla.com Live Chat: WWW.OYPLA.COM

CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.









PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION



AN OFFICIAL OYPLA BRANDED PRODUCT

Model Code: 3455

Oypla.com LLP / www.oypla.com

