

DIY

THANK YOU FOR YOUR ORDER



**Post Hole Fence Auger**

**150mm**

# Safety Instructions

## Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
  - Never carry out any alterations or modifications to this product.
  - This product is intended for outdoor use only.
  - Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product.
  - If at any time during activity you feel faint, dizzy, experience pain stop and take a break.
  - Leaving the product outside exposed to weather, especially direct sun and rain, will speed the weathering process. This can be slowed by removing the product from these conditions.
  - Do not carry out alterations or modifications to this product.
  - Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
  - Not suitable for use by children.
  - If the product is damaged or has any defects, please contact [cservice@oypla.com](mailto:cservice@oypla.com)
- 
- **WARNING:** The end of the earth auger is sharp, and can therefore cause injury if not used correctly. We recommend wearing steel toe capped footwear whilst operating this product to protect your feet from the sharp end.



# Assembly Instructions

1. Slide the handle section of the post hole auger on top of the lower section, ensuring it goes all the way down.
2. Push the bolt through the hole found in the handle section and the lower section. Make sure it goes through completely to avoid the bolt being loose.
3. Secure the bolt in place with the nut. Ensure that it has been secured tightly.
4. Place the post hole auger into the ground and rotate clockwise to drill a hole into the ground. Continue rotating the post hole auger clockwise until the hole is at the desired depth and then rotate anti-clockwise to remove the post hole auger from the ground.

---

## HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55  
Email: [cservice@oypla.com](mailto:cservice@oypla.com)  
Live Chat: [WWW.OYPLA.COM](http://WWW.OYPLA.COM)

---

## CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



---

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

# OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

Imported by Oypla.com LLP, Uxbridge, UB8 2FX

**USER MANUAL Model No: 3459**