

LEISURE

THANK YOU FOR YOUR ORDER

Contents

- 1 Front Cover
-
- 2 Safety Instructions
-
- 2 Warning
-
- 3 Back Cover

End



6 String Guitar w/ Amplifier

Contents

1	Front Cover
-	
2	Safety Instructions
-	
2	Warning
-	
3	Back Cover
	End


Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Make sure all fastenings are tightly in place and that everything is in order before using the product. This should be checked periodically by an adult.
- Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
- This product is not a toy, and is only to be used for its designated purpose.
- Make sure to have a tight hold of the guitar whilst in use.
- This product is only suitable for persons aged 3 and above.
- When storing the guitar, ensure it is in a safe location and stored in an upright position, where the risk of damage is low.
- If a child is using the product, they should be supervised at all times.
- Do not carry out alterations or modifications to this product.
- Persons (including children) with reduced physical, sensory and mental capacities or lack of experience and knowledge do not intend this product for use, unless persons responsible for their safety have given them supervision or instruction concerning use of the product,
- Keep away from fire.
- When cleaning, make sure the product is turned off and unplugged from the wall socket.
- If the product is damaged or defective, please contact cservice@oypla.com

Warning

 Beware of loud noise! When plugging the guitar into an amplifier, ensure the volume is set to low, or off, to prevent potential damage to ears.



Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
2	Warning
-	-
3	Back Cover
	End

HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55
Email: cservice@oypla.com
Live Chat: WWW.OYPLA.COM

CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

ENVIRONMENTAL PROTECTION

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.

