



20L Floor Sweeper

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Make sure all fastenings are tightly in place and that everything is in order before using the product. This should be checked periodically by an adult.
- Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
- Use the correct fixings as indicated. Do not tighten any of the nuts until the unit is completely assembled, then finish by tightening all nuts. All nuts must be tightened before use.
- This product contains small parts that could be a choking hazard if swallowed. Keep these items away from children.
- Do not carry out alterations or modifications to this product.
- Persons (including children) with reduced physical, sensory and mental capacities or lack of experience and knowledge do not intend this product for use, unless persons responsible for their safety have given them supervision or instruction concerning use of the product.
- When the child is using this product, they should be supervised at all times.
- Do not use the sweeper where there is a risk of causing a fire or explosion; e.g. in the presence of flammable liquids, gasses or dust.
- Be aware of all power lines, electrical circuits, water pipes and other mechanical hazards in the work area, particularly those hazards below the work surface hidden from the operator's view that may be unintentionally contacted and may cause personal harm or property damage.
- Be aware of your surroundings. Using this sweeper in confined work areas may put you dangerously close to cutting tool and rotating parts.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Assembly Instructions

Parts List:

Please check you have all parts below before attempting to assemble this product.

If you are missing any of the below parts, please contact Oypla customer services:

cservice@oypla.com



Assembly

1. Remove the sweeper and brushes from the package
2. Affix the brushes (4) to the front of the machine using the screws provided for each
3. Unfold the push handle (1) to its open position and tighten the handle screws (2). Affix the handle to the plates at the back of the machine using the handle screws (3) and the provided nuts

Operation

1. When using the sweeper outdoors, sweep in the direction of the air as much as possible
2. Adjust the height of the sweeper by turning the adjustable switch on the top (5) to a suitable position. Turn clockwise to raise the height, and anti-clockwise to lower the height
3. Do not rush the job. Work slowly, especially when you are changing directions
4. The sweeper can be operated on a slope in the approximate vertical direction. However, do not operate on an incline of more than 20°

Maintenance

- **Maintain your sweeper.** It is recommended that the general condition of the sweeper be examined thoroughly before use. Keep the sweeper in a state good repair by adopting a program of conscientious repair and maintenance in accordance with the recommended procedures found in this manual. Have necessary repairs made by qualified service personnel
- **Cleaning.** Use only soap and a damp cloth to clean the outside of your sweeper. Many household cleaners are harmful to plastics and other insulation. Never let liquid get inside a tool
- **Keep metal parts dry to minimise corrosion**

Please retain a copy of all instructions for future consultation.



An Official Oypla Branded Product

Imported into the EU by Oypla.com LLP, Uxbridge, UB8 2FX

USER MANUAL Model No: 3504