

HOME

THANK YOU FOR YOUR ORDER



1.5kW and 2.5Kw Hot Plate

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Close supervision is necessary when the product is used by or near children. Do not allow children to use it as a toy.
 - Do not operate any product with a damaged cord or plug, or after the product malfunctions.
 - To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid other than those necessary for correct operation of the product.
 - Never operate electrical appliance in immediate vicinity of water sources.
 - Switch off or unplug from outlet when not in use and before cleaning.
 - Do not touch the surfaces or the hot plate when in operation.
 - Do not leave the product unattended when switched on.
 - This product is for domestic use only.
 - Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
 - Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
 - Clean the painted surface with a damp soft cloth and mild household cleaning powder.
 - To clean the circular hot plate can be removed with household cleaning powder. Wait to cool down before cleaning.
 - Utensils with convex, concave or uneven bottoms should not be used.
 - This product is not a toy, and is only to be used for its designated purpose.
 - If the product is damaged or has any defects, please contact cservice@oypla.com
- **WARNING** Leaving burnt food or residue on the glass hobs or the ceramic coating can create a risk of cracking. To prevent this, ensure spillages are cleared and no food is left on the product.

Operating Instructions

How to use your Hot Plate:

Before using your hot plate for the first time, turn the hot plate on the highest setting for 3-5 minutes to condition the protective coating.

For the most efficient operation of your 1.5kW hot plate, the cooking utensils used should have a solid base with a diameter of approx. 18-20cm and a maximum of 1.5L. For your double 2.5Kw (1.5kW & 1kW) hot plate, diameter of the smaller plate of approx. 15-17cm.

Turn the controls to the recommended position marked to achieve the desired temperature:

1. For simmering of delicate foods and thickening sauces
2. Slow cooking
3. For simmering large quantities
4. To bring all dishes to rapid heat
5. Bring to a Boil

Note: the light will go off when the hot plate reaches the selected temperature, and will cycle on and off to maintain the temperature.

HAVE A QUESTION ABOUT YOUR PURCHASE?

OUR DEDICATED CUSTOMER SERVICES TEAM ARE HAPPY TO HELP
CONTACT THEM VIA:

TELEPHONE: 020 3600 2255

EMAIL: cservice@oypla.com

LIVE CHAT: www.oypla.com

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION



Environmental Protection

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



OYPLA.COM

An Official OYPLA Branded Product



Imported by Oypla.com LLP, Uxbridge, UB8 2FX

USER MANUAL Model No: 3349, 3561