



Double Retractable Washing Line


Safety Instructions


Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- Do not allow children or pets to swing on the line or items of laundry.
- Regularly check the line for any worn or damaged parts. If there is any damage, do not use the line until repaired.
- Do not retract the line if there is washing attached to it.
- Hold the line firmly when retracting or extending to and from the reel case.
- Never allow the line to snap back into the reel case as it could result in personal injury or damage to the reel or wall.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Operating Instructions

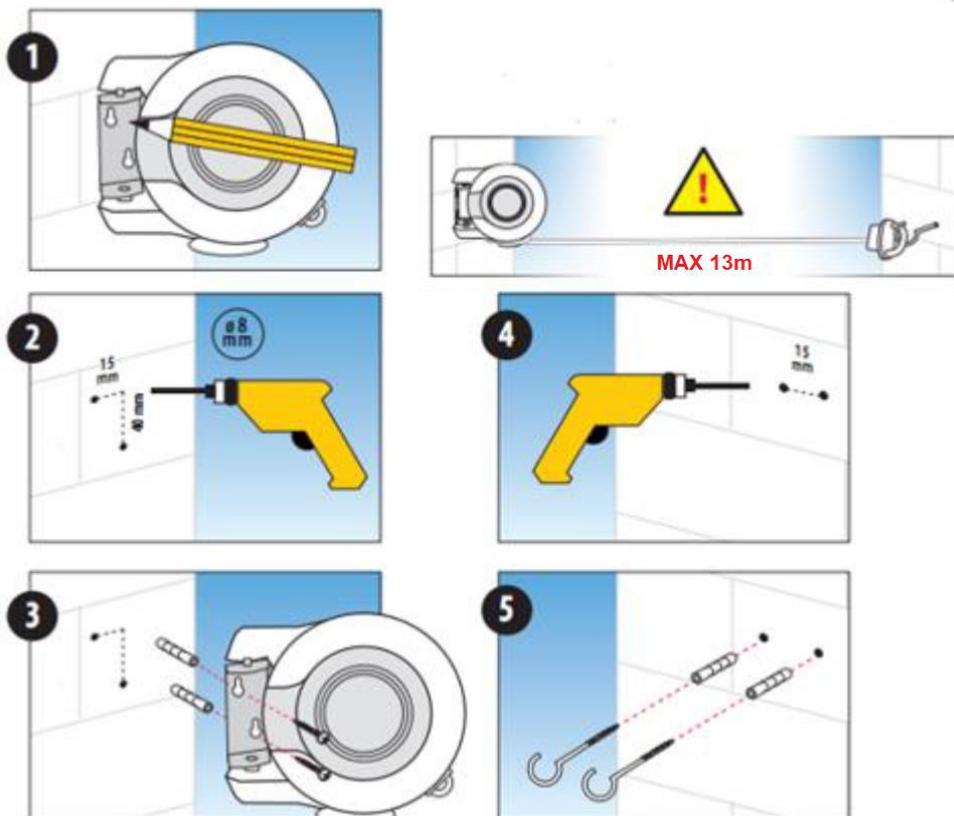

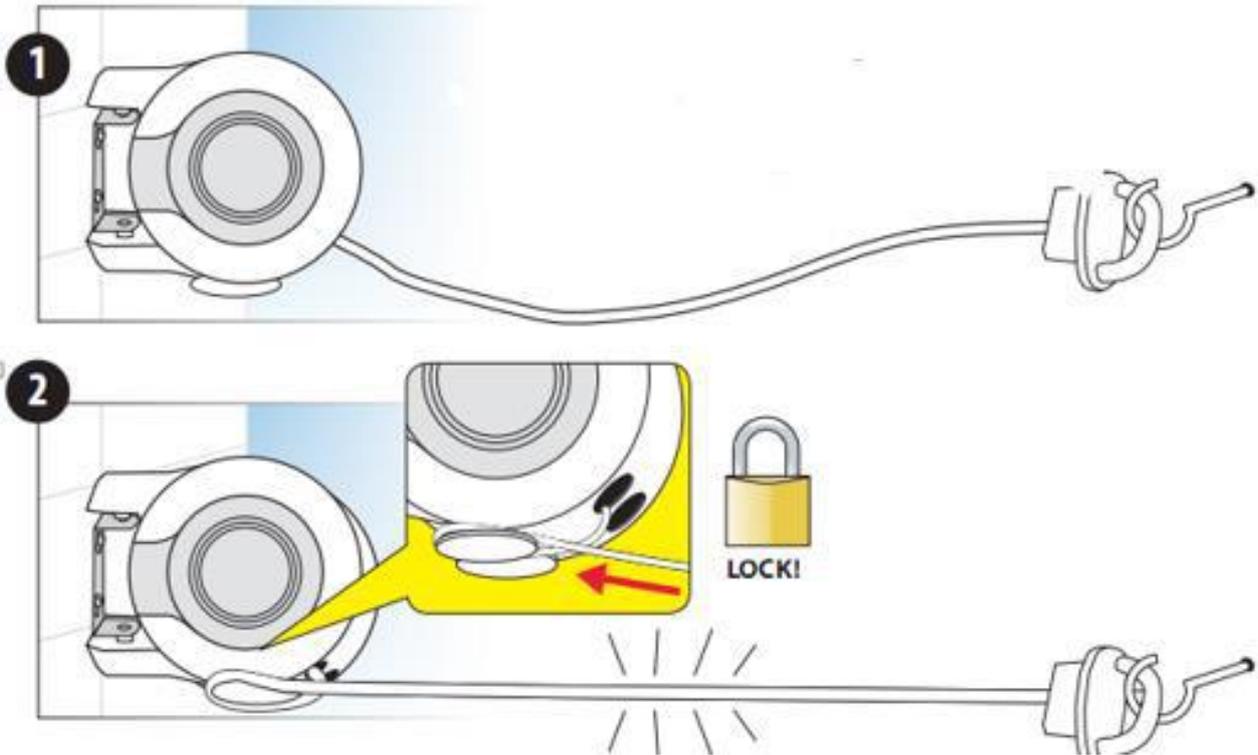

1. After the reel is properly installed, extend the line by pulling on the line hook and fastening to the screw eye hook.
2. Pull the line taught and wrap the line one full turn around the locking ring. Allow the remaining line to return into the reel case. Always allow enough line to wrap around the locking ring.
3. To retract the line, unwrap it from the locking ring and remove the line from the hook. Holding the case allow the line to slowly retract into the case.

HAVE A QUESTION ABOUT YOUR PURCHASE?

OUR DEDICATED CUSTOMER SERVICES TEAM ARE HAPPY TO HELP
CONTACT THEM VIA:

TELEPHONE: 020 3600 2255

EMAIL: cservice@oypla.com

LIVE CHAT: www.oypla.com

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

An Official OYPLA Branded Product

Imported by Oypla.com LLP, Uxbridge, UB8 2FX

USER MANUAL Model No: 3605