



PB Black 4 String Electric Bass Guitar & 15W Amp

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Make sure all fastenings are tightly in place and that everything is in order before using the product. This should be checked periodically by an adult.
- Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
- This product is not a toy, and is only to be used for its designated purpose.
- When the child is using this product, they should be supervised at all times.
- Do not carry out alterations or modifications to this product.
- Persons (including children) with reduced physical, sensory and mental capacities or lack of experience and knowledge do not intend this product for use, unless persons responsible for their safety have given them supervision or instruction concerning use of the product.
- Keep away from fire.
- Make sure to have a tight hold on the product whilst in use.
- This product is only suitable for children aged three and above.
- When storing make sure it is upright and in a safe location where the risk of damage is low.
- When the child is using this product, they should be supervised at all times.
- When cleaning, make sure the product is turned off and unplugged from the wall if necessary and has also been left 5 or 10 minutes to remove the risk of electrical shock.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Please retain a copy of all instructions for future consultation.



An Official Oypla Branded Product

Imported into the EU by Oypla.com LLP, Uxbridge, UB8 2FX

USER MANUAL Model No: 3691