

OYPLA

User Manual

Model Code: 3704

Contents

- 1 Front Cover
-
- 2 Safety
Instructions
-
- 2 Warnings
-
- 3 Assembly
Instructions
-
- 4 Back Cover

End



Wall Mounted Cigarette Bin

OYPLA

Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
2	Warnings
-	-
3	Assembly Instructions
-	-
4	Back Cover

End

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product contains small parts that could be a choking hazard if swallowed. Keep these items away from children.
- This product should only be used for its designated purpose.
- Before using the product, ensure all fastenings are tightly in place and everything is in order. This should be checked periodically by an adult.
- The user is responsible for the mounting and position on the cigarette bin.
- Ensure the cigarette is fully extinguished before placing in the bin – if not, it could create a fire hazard.
- Ensure the bin is emptied frequently – a full bin could create a fire hazard.
- This product is intended for outdoor use only.
- Do not carry out alterations or modifications to this product.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances, as these may damage the product.
- Keep fingers, loose clothing, hair and jewellery away when emptying the product, and/or folding/unfolding the opening.
- When depositing the content within the cigarette bin, please deposit in an environmentally friendly manner.
- If the product is damaged or defective, please contact cservice@oypla.com

Warnings

⚠ Ensure the bin is emptied frequently – a full bin could create a fire hazard.

⚠ Ensure all cigarettes are fully extinguished before inserting them into the bin. Failure to do so may create a fire hazard.

Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
2	Warnings
-	-
3	Assembly Instructions
-	-
4	Back Cover
	End

Assembly Instructions

Parts List:

- If you are missing any of the below parts, please contact cservice@oypla.com
- Please be aware that you will be referring to this parts list throughout the assembly process.

1 x Cigarette Bin	2 x Key
1 x Metal Ash Bin	4 x Screw
	4 x Wall Plug

1

Open the cigarette bin using the key provided, taking out the metal ash bin.

Drill the four holes needed in the desired wall/surface, using the inside of the tray as a guide to mark out the holes lightly with a pencil. Once you've drilled the holes in the wall, push the wall plugs inside so when the screws are added they'll be secure.

2

*Note - do not use a drill bit which is too large. Compare drill bit to the wall plug to ensure it will fit snug.

*Note - ensure to check for any hidden cables/pipes in the wall before proceeding with drilling.

3

Once done, place a screw into one of the holes in the cigarette bin, ensuring it goes through both the bin and into the washer. Drill the screw into the wall, ensuring not to tighten the screw too much, to avoid damaging the product. Repeat this step for the remaining holes. This will secure the cigarette bin against the wall.

4

Slide the metal ash bin back into place, ensuring it locks into place by overlapping the metal folds of the metal ash bin and cigarette bin.

5

Once the metal ash bin is secure, push the front of the cigarette bin back into place and lock it. Keep the key, as this will allow you to empty the metal ash bin. You are now able to use the cigarette bin. To empty the cigarette bin, take one of the keys provided and unlock the front panel to gain access to the ashtray within. Slide the ashtray out of the cigarette bin wall mount, and empty the ashtray in an environmentally friendly way.

Contents

- 1 Front Cover
-
- 2 Safety
Instructions
-
- 2 Warnings
-
- 3 Assembly
Instructions
-
- 4 Back Cover

End

HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55
Email: cservice@oypla.com
Live Chat: WWW.OYPLA.COM

CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT