



# Children's Picnic Bench

# Safety Instructions

## **Notice: Ensure you read and fully understand instructions before use**

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Make sure all fastenings are tightly in place and that everything is in order before using the product. This should be checked periodically by an adult.
- Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
- This product is for domestic use only.
- This product is not a toy, and is to only be used for its designated purpose.
- Do not carry out alterations or modifications to this product.
- Only use this product on stable, level and dry ground.
- An adult should assess the area that the bench will be set to remove any potential hazards.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product.
- This product is suitable for children between 3-6 years. This table should not be used by children above or below this age range.
- **The maximum seating weight is 80kg. The table is only suitable to seat 4 children.**
- **WARNING!** Adult supervision is required when in use.
- This table must be assembled by an adult.
- If this product is damaged or has any defects, please contact [cservice@oypla.com](mailto:cservice@oypla.com).

# Assembly Instructions


## Parts List:

Please check you have all parts below before attempting to assemble this product.


If you are missing any of the below parts, please contact Oypla customer services:

[cservice@oypla.com](mailto:cservice@oypla.com)


Part A : 2pcs

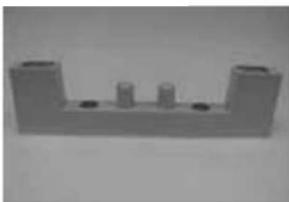

Part B : 2pcs

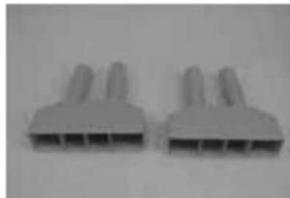


Part C : 4pcs

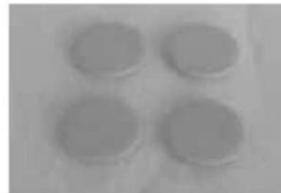

Part D : 2pcs



Part E : 1pc

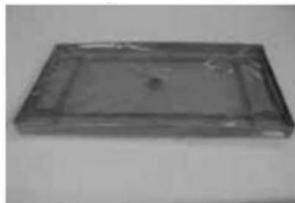


Part F & G





## Assembly:

1. Place the leg base (A) upright and insert the leg (B) by pushing it down firmly.
2. Insert safety caps (C) into the assembled base.
3. Place the bench seats (D) between the assembled bases and fit into the slots by pushing down firmly.

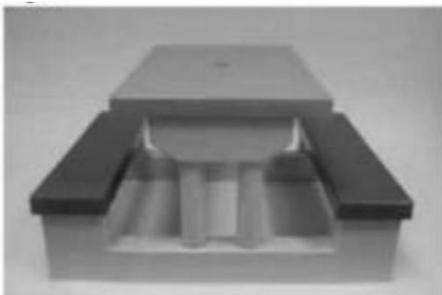

4. Place the table top (E) across the centre of the legs, making sure each end is fitted securely.
5. Insert the parasol holder (G) into the mounting socket (H).
6. Insert the parasol holder into the table top and attach the parasol.

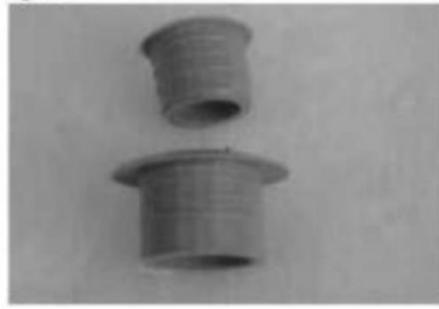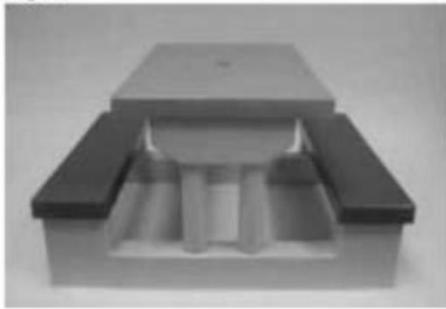

**WARNING:** The fixings for the apparatus should be checked before each use for incorrect positioning and any damage to the fixings or the hanging rope. Any damage to either the fixings or rope must be replaced immediately.

### **Safety and Maintenance:**

- Before use clean the product with mild soap and water, rinse thoroughly.
- Store inside or under a suitable cover during winter.
- Remove the parasol from the table during windy conditions.
- This is for domestic use only.
- This product is only suited for ages three and above.
- **Maximum Individual User Weight – 20kg.**
- Adult supervision is required when the product is in use.
- Do not sit or stand on the table top.

### **HAVE A QUESTION ABOUT YOUR PURCHASE?**

OUR DEDICATED CUSTOMER SERVICES TEAM ARE HAPPY TO HELP  
CONTACT THEM VIA:

TELEPHONE: 020 3600 2255

EMAIL: [cservice@oypla.com](mailto:cservice@oypla.com)

LIVE CHAT: [www.oypla.com](http://www.oypla.com)

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

# OYPLA.COM

An Official OYPLA Branded Product

Imported by Oypla.com LLP, Uxbridge, UB8 2FX

**USER MANUAL Model No: 3740, 3741**

