

OYPLATM

GARDEN



2 x Reclining Deck Chair

USER MANUAL Model No: 3743

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- Never carry out any alterations or modifications to this product.
- This product is intended for outdoor use only.
- Always make sure that the product is on a stable surface to avoid sliding.
- Please do not exceed the 100kg weight limit per chair.
- Keep fingers, loose clothing, and hair away when folding the product. Pinch points can cause personal injury.
- When reclining back on the deck chair, please be aware of your surroundings and if there are any objects beneath or around the upper section of the deck chair. This is to avoid damaging the chair and/or injuring yourself and others.
- Once the chairs have been folded out, make sure they are secure before use.
- Leaving the product outside exposed to weather, especially direct sun, rain and salt air, will speed the weathering process. This can be slowed by removing the product from these conditions, or covering it with a suitable cover.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product.
- If the product is damaged or has any defects, please contact cservice@oypla.com



An Official Oypla Branded Product

Please retain a copy of all instructions for future consultation.