



25m 4 Way Gang Socket Extension Cable Reel

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- Keep away from any liquids.
- Always unplug the product when not in use.
- When cleaning make sure the product is turned off and unplugged from the wall and has been left for 5 or 10 minutes to remove the risk of electrical shock.
- Do not carry out alterations or modifications to this product.
- Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product.
- Don't overload the product.
- Keep fingers, hair and loose clothing away from the sockets.
- If the product is damaged or has any defects, please contact cservice@oypla.com.

Please retain a copy of all instructions for future consultation.



An Official Oypla Branded Product

Imported into the EU by Oypla.com LLP, Uxbridge, UB8 2FX