

HOME

THANK YOU FOR YOUR ORDER

Contents

- 1 Front Cover
-
- 2 Safety
Instructions
-
- 3 Operating
Instructions
-
- 3 Care and
Maintenance
-
- 4 Back Cover

End



Fan Heater

Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
3	Operating Instructions
-	-
3	Care and Maintenance
-	-
4	Back Cover

End

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- The product should only be connected to a 220-240V AC, 50Hz electrical outlet.
- Never leave the product unattended whilst it is switched on.
- If you have to leave the product unattended, even for a short while, always switch it off.
- Keep the product out of children's reach and do not allow children to use it.
- The product is only intended for normal domestic use and only in the manner described in this instruction manual.
- Inspect the mains lead regularly. Never use the product if the mains lead or plug has been damaged in any way.
- Do not place the mains lead on or near any hot surface.
- Do not touch the product if your hands are moist or wet.
- Never move the product by pulling on the lead.
- Keep furniture, curtains, textiles and other flammable material at least 1 metre away from the heater.
- Keep the air inlet and outlet away from objects at least 1m in front of the heater and 50cm behind.
- Never place the cable directly against the heater or close to a hot air outlet.
- Do not touch the heater during use as it will get very hot and could cause injury.
- The heater must not be located immediately below or next to a mains power supply.
- Never cover the heater in any way.
- Do not move the heater whilst in use.
- Never use the heater in areas where explosive gases or liquids are stored.
- The heater should be placed on a stable, heat-resistant surface.
- This product is not intended for use by persons (including children) with reduced physical, mental and sensory capacities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the product by persons responsible for their safety.
- If the product is damaged or has any defects, please contact cservice@oypla.com
- Do not use this heater in bathrooms.
- Do not use this heater if it has been dropped, or appears damaged in any way.

Warnings


⚡ WARNING ⚡	To Reduce The Risk of Fire or Electric Shock, follow these basic precautions:
<ul style="list-style-type: none"> • Read all instructions before using the heater. • Never allow children to operate or play with the heater. • Never clean heater parts with flammable fluids. The fumes can create a fire hazard or explosion. • Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other heater. The fumes can create a fire hazard or explosion. <p>UNPLUG OR DISCONNECT THIS HEATER FROM THE POWER SUPPLY BEFORE SERVICING.</p> <p style="text-align: center;">-Save these instructions-</p>	

Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
3	Operating Instructions
-	-
3	Care and Maintenance
-	-
4	Back Cover

End

Operating Instructions

1. Plug the heater into a 220-240V AC outlet. The heater will be on standby mode.
2. Turn the thermostat knob clockwise to the maximum setting.
3. For a low heat setting, turn the control knob to the “I” position (1000W). For a high heat setting, turn the control knob to the “II” position (2000W).
4. The heater can also be used as solely a fan in hot weather by turning the control knob to the  position.
5. To turn off the heater, turn the control knob to the “O” position.

REGULATING THE THERMOSTAT:

Once the room has reached the desired temperature, turn the thermostat knob anti-clockwise to the point where the heater turns off and not beyond. The heater will now maintain the current room temperature and will automatically turn on if the temperature drops.

OVERHEAT PROTECTION

The heater has been provided with an overheating safety sensor that turns the heater off if there is a technical malfunction or if it is being used incorrectly (such as obstruction of the air vents). If it happens, you must unplug the heater and remove the cause of overheating or correct the malfunction. After a cooling down period of approximately 15 minutes turn the heater back on.

CARE AND MAINTENANCE

- Before cleaning the heater, disconnect the plug from the power supply and allow it to cool down fully.
- Clean the casing with a damp cloth. Do not use any strong cleaning material and do not allow water to reach any internal parts.
- If the heater is not going to be used for a long time it is recommended to store the heater in its box in a dry place to prevent the build-up of internal dust.

Contents

- 1 Front Cover
-
- 2 Safety
Instructions
-
- 3 Operating
Instructions
-
- 3 Care and
Maintenance
-
- 4 Back Cover

End

HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55
Email: cservice@oypla.com
Live Chat: WWW.OYPLA.COM

CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

ENVIRONMENTAL PROTECTION

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.

