

# OYPLA<sup>TM</sup> HOME



## Fan Heater

USER MANUAL Model No: 3825

# Safety Instructions

Please read the entire instruction manual before using the product and then save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. In the event of technical problems or other queries, please contact our Customer Services.

- The product should only be connected to a 220-240V AC, 50Hz electrical outlet.
- Never leave the product unattended whilst it is switched on.
- If you have to leave the product unattended, even for a short while, always switch it off.
- Keep the product out of children's reach and do not allow children to use it.
- The product is only intended for normal domestic use and only in the manner described in this instruction manual.
- Inspect the mains lead regularly. Never use the product if the mains lead or plug has been damaged in any way.
- Do not place the mains lead on or near any hot surface.
- Do not touch the product if your hands are moist or wet.
- Never move the product by pulling on the lead.
- Keep furniture, curtains and other flammable material at least 1 metre away from the heater.
- Keep the air inlet and outlet away from objects at least 1m in front of the heater and 50cm behind.
- Do not use this heater in bathrooms.
- Never place the cable directly against the heater or close to a hot air outlet.
- Do not touch the heater during use as it will get very hot and could cause injury.
- The heater must not be located immediately below or next to a mains power supply.
- Never cover the heater in any way.
- Do not move the heater whilst in use.
- Never use the heater in areas where explosive gasses or liquids are stored.
- The heater should be placed on a stable, heat-resistant surface.
- This product is not intended for use by persons (including children) with reduced physical, mental and sensory capacities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the product by persons responsible for their safety.
- Do not discard any packaging until you have checked that you have all of the parts and fittings required.
- If the product is damaged or has any defects, please contact [cservice@oypla.com](mailto:cservice@oypla.com)

## ⚡ WARNING ⚡

To Reduce The Risk of Fire or Electric Shock, follow these basic precautions:

 
- Read all instructions before using the heater.
- Never allow children to operate or play with the heater.
- Never clean heater parts with flammable fluids. The fumes can create a fire hazard or explosion.
- Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other heater. The fumes can create a fire hazard or explosion.

UNPLUG OR DISCONNECT THIS HEATER FROM THE POWER SUPPLY BEFORE SERVICING.

**-Save these instructions-**

# Operating Instructions

## Operating Instructions

1. Plug the heater into a 220-240V AC outlet. The heater will be on standby mode.
2. Turn the thermostat knob clockwise to the maximum setting.
3. For a low heat setting, turn the control knob to the “I” position (1000W). For a high heat setting, turn the control knob to the “II” position (2000W)
4. The heater can also be used as solely a fan in hot weather by turning the control knob to the  position.
5. To turn off the heater, turn the control knob to the “O” position.

## Regulating the Thermostat

Once the room has reached the desired temperature, turn the thermostat knob anti-clockwise to the point where the heater turns off and not beyond. The heater will now maintain the current room temperature and will automatically turn on if the temperature drops.

## Overheat Protection

The heater has been provided with an overheating safety sensor that turns the heater off if there is a technical malfunction or if it is being used incorrectly (such as obstruction of the air vents). If it happens, you must unplug the heater and remove the cause of overheating or correct the malfunction.

After a cooling down period of approximately 15 minutes turn the heater back on.

## Care and Maintenance

- Before cleaning the heater, disconnect the plug from the power supply and allow it to cool down fully.
- Clean the casing with a damp cloth. Do not use any strong cleaning material and do not allow water to reach any internal parts.
- If the heater is not going to be used for a long time it is recommended to store the heater in its box in a dry place to prevent the build-up of internal dust.

## Disposal of Unit

Products bearing the symbol shown above means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



**An Official Oypla Branded Product**



Imported into EU by Oypla.com LLP, Uxbridge, UB8 2FX

**USER MANUAL Model No: 3825**

Model identifier(s): 3825					
Item	Symbol	Value	unit	Item	unit
<b>Heat output</b>				<b>Type of heat input, for electric storage local space heaters only (select one)</b>	
Nominal heat output	$P_{nom}$	1,847	kW	manual heat charge control, with integrated thermostat	NA
Minimum heat output (indicative)	$P_{min}$	0	kW	manual heat charge control with room and/or outdoor temperature feedback	NA
Maximum continuous heat output	$P_{max,c}$	1,847	kW	electronic heat charge control with room and/or outdoor temperature feedback	NA
<b>Auxiliary electricity consumption</b>				fan assisted heat output	
At nominal heat output	$el_{max}$	NA	kW	<b>Type of heat output/room temperature control (select one)</b>	
At minimum heat output	$el_{min}$	NA	kW	single stage heat output and no room temperature control	[no]
In standby mode	$el_{sb}$	NA	kW	Two or more manual stages, no room temperature control	[no]
				with mechanic thermostat room temperature control	[yes]
				with electronic room temperature control	[no]
				electronic room temperature control plus day timer	[no]
				electronic room temperature control plus week timer	[no]
				<b>Other control options (multiple selections possible)</b>	
				room temperature control, with presence detection	[no]
				room temperature control, with open window detection	[no]
				with distance control option	[no]
				with adaptive start control	[no]
				with working time limitation	[no]
				with black bulb sensor	[no]
Contact details :	Oypla.com LLP, Uxbridge, UB8 2FX				