

HOME

THANK YOU FOR YOUR ORDER

Contents

- 1 Front Cover
-
- 2 Safety
Instructions
-
- 3 Operating
Instructions
-
- 4 Cleaning and
Maintenance
-
- 5 Back Cover

End



Ceramic Hot Plate

Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
3	Operating Instructions
-	-
4	Cleaning and Maintenance
-	-
5	Back Cover
	End

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Never carry out any alterations or modifications to this product.
- This product is not a toy, and is only to be used for its designated purpose.
- This product is intended for indoor use only.
- Only use this product on stable, level and dry surfaces.
- Never leave the appliance unattended when in use.
- Make sure the appliance doesn't come into contact with outside sources of heat, such as a cooker top or an open flame.
- Do not use pans that are unstable and/or easily tipped. Use flat-bottomed pans to ensure full contact with the hotplate for maximum heat efficiency.
- For long-life performance, avoid dropping any items onto the infrared hotplate.
- Do not use the appliance if it has been dropped or has fallen from height.
- Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance, and that the socket is earthed.
- When the appliance is not in use, always unplug from the mains socket.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials, as these may damage the product.
- Do not use glass containers to cook using this appliance.
- If the product is damaged or has any defects, please contact our customer services team at cservice@oypla.com
- When using this infrared hotplate for the first time, you may encounter some smoke due to the manufacturing oils used during production. This is perfectly safe and normal.
- Do not use the appliance if it is damaged in any way.

Warnings

 Leaving burnt food or residue on the glass hobs or the ceramic coating can create a risk of cracking. To prevent this, ensure spillages are cleared and no food is left on the product.

 The top crystallite surfaces and the heating elements become extremely hot and can cause severe burns. Do not touch these parts whilst they are hot.

 To protect against electrical shock, do not immerse cord, plug or any part of this appliance in water or any other liquid.

 Before cleaning, make sure the product is off, unplugged from the socket and has been left for two hours to remove the risk of electrical shock or burns.


Contents

- 1 Front Cover
-
- 2 Safety Instructions
-
- 3 Operating Instructions
-
- 4 Cleaning and Maintenance
-
- 5 Back Cover

End

Operating Instructions

Please refer to the diagram below for instructions on how to operate your product.

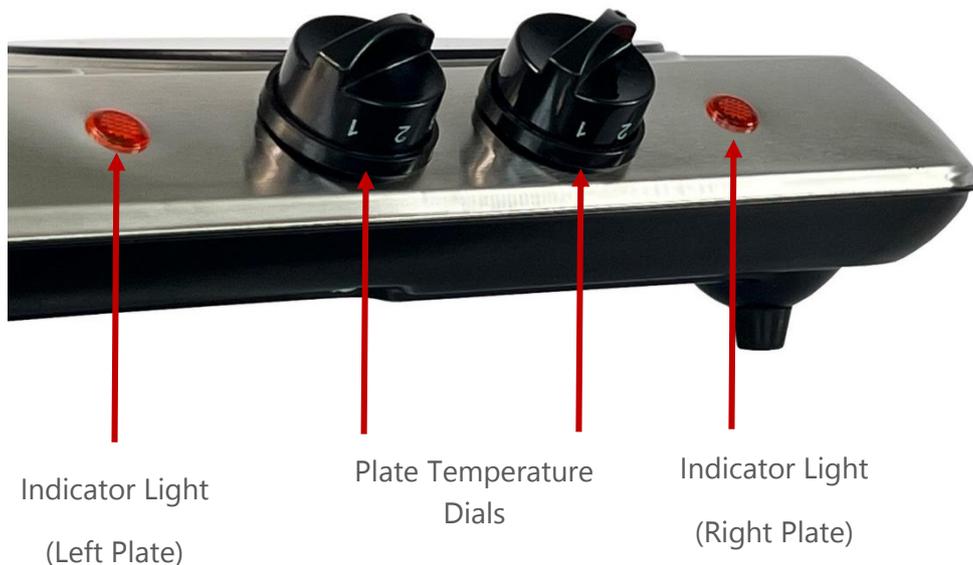

Indicator Light
(Left Plate)

Plate Temperature
Dials

Indicator Light
(Right Plate)

Before First Use

Before using your hot plate for the first time, we recommend turning the temperature dials to the highest setting for 3-5 minutes, as this helps protect the coating. This should be done when there is no cooking utensil on the hot plate.

Temperature Dials

The three dots, followed by the numbers 1-5, indicate the temperature settings available. The "three dots" means the plate is switched off. Turning the dial through the numbers increases the heat. To switch the hot plate off, simply turn the dials all the way back to the three dots symbol until it will no longer rotate.

Usage

- 1) Put the hotplate on a flat, dry and heat resistant surface.
- 2) Turn the temperature control dial to off.
- 3) Insert the plug into the power socket.
- 4) Turn the control dial to the desired setting. The unit will cycle on and off to maintain the selected temperature.
- 5) The indication light at the front of the appliance will turn off when the hot plate reaches the desired temperature, and the procedure of the heating will stop and recycle to maintain the temperature.
- 6) The heating element will begin to heat immediately. Do not touch whilst in use, the housing surface will be hot.
- 7) When not in use, unplug the power cord from the wall outlet and allow it to cool down completely.

Contents

1	Front Cover
-	-
2	Safety
	Instructions
-	-
3	Operating
	Instructions
-	-
4	Cleaning and
	Maintenance
-	-
5	Back Cover

End

Keeping Food Warm

If you wish to simply keep food warm for a period of time, this can be achieved by using the "2" heat setting on the dial. When switched off, the hot plate will keep food warm for up to 30 minutes as it gradually cools down.

Cleaning & Maintenance

Please refer to the instructions below in regards to cleaning and maintaining your product.

- Do not use any harsh or industrial cleaning chemicals or substances to clean the product, as these may damage it. Simply wipe clean with a damp (not wet) cloth when the hot plate is switched off and completely cool.
- No maintenance should be carried out by the user. For assistance, please contact cservice@oypla.com
- The appliance should be switched off, unplugged and allowed time to completely cool before any cleaning is performed.
- Ensure the appliance is completely dry before using it after being cleaned.
- If the appliance is damaged in any way, never attempt to fix it yourself. Contact cservice@oypla.com for assistance.

Contents

- 1 Front Cover
-
- 2 Safety
Instructions
-
- 3 Operating
Instructions
-
- 4 Cleaning and
Maintenance
-
- 5 Back Cover

End



HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55
Email: cservice@oypla.com
Live Chat: WWW.OYPLA.COM

CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

ENVIRONMENTAL PROTECTION

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.

