

# OYPOLEA™

## LEISURE



## 4 Wheel Shopping Trolley

USER MANUAL Model No: 3847

# Safety Instructions

## **Notice: Ensure you read and fully understand instructions before use**

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- Never carry out any alterations or modifications to this product.
- This product is intended for use only.
- Make sure that the bag is secured to the frame correctly before loading the items in, this is so that there's no risk of the bag detaching during movement.
- Regularly check the wheels to ensure they are secure. If they are loose be sure to push them into the spokes.
- This product is for light shopping or laundry. Do not use this for heavy goods.
- Leaving the product outside exposed to weather, especially direct sun, rain and salt air, will speed the weathering process. This can be slowed by removing the product from these conditions, or covering it with a suitable cover.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product.
- If the product is damaged or has any defects, please contact [cservice@oypla.com](mailto:cservice@oypla.com)

## **How to Build:**

1. Unfold the trolley frame and lay the frame on the ground.
2. Push a wheel onto each of the spokes, making sure that they are secure.
3. Widen the bag and place it into the frame, securing the canvas lid around the frame.

**Please retain a copy of all instructions for future consultation.**



**An Official Oypla Branded Product**

**USER MANUAL Model No: 3847**