

OYPLA™

HOME

THANK YOU FOR YOUR ORDER



1850W Electric Stove Heater

USER MANUAL Model No: 3848

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- Never carry out any alterations or modifications to this product.
- This product is intended for indoor use only.
- Make sure the product is out of the immediate reach of children to avoid potential hazards and injuries.
- Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
- To protect against electrical shock, do not immerse cord, plug or any part of this appliance in water or any other liquid.
- Once you are finished with the product be sure to turn it off, leaving it on can be dangerous. Allow to cool before moving/storing.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product.
- When moving/storing the product, be careful as to not break the glass panel on the front of the product.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Operating Instructions

Parts List:


If you are missing any of the below parts please contact cservice@oypla.com

Please be aware that you will be referring to this parts list throughout the assembly process.

1. 	2. 	1. 1850W electric stove heater 2. Support leg x 4
	3. 	3. Truss screw x 12



1. Place the electric stove heater (part 1) upside down, making sure to not break the front glass panel. Once done, align the holes in a support leg (part 2) with the holes found in the corners of the bottom of the electric stove heater (part 1). Secure the support leg (part 2) into place using the truss screws (part 3). Repeat this for the remaining corners. Please see the image to the left.

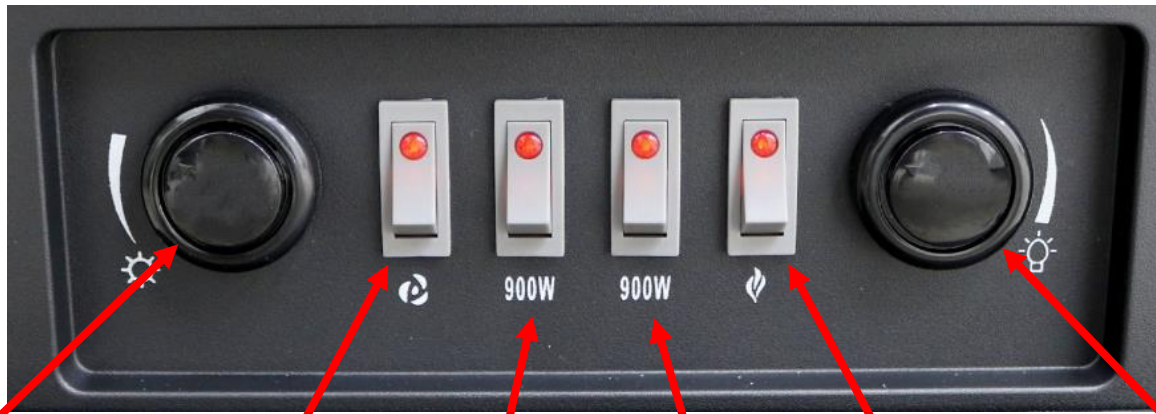

Heating
Power
Dial

Activate Fan
(Needed for Heating)

One switch ON – Low Power
Both switches ON – High Power

Light Switch

Light
Intensity
Dial

HAVE A QUESTION ABOUT YOUR PURCHASE?

OUR DEDICATED CUSTOMER SERVICES TEAM ARE HAPPY TO HELP
CONTACT THEM VIA:

TELEPHONE: 020 3600 2255

EMAIL: cservice@oypla.com

LIVE CHAT: www.oypla.com

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION



Environmental Protection

OYPLA.COM

An Official OYPLA Branded Product



Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



Imported by Oypla.com LLP, Uxbridge, UB8 2FX

USER MANUAL Model No: 3848