

Kids Toy Bow and Arrow

USER MANUAL Model No: 3851

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is intended for indoor use only.
- Children should be supervised at all times when using the product.
- This toy is not suitable for children under the age of 3.
- Never carry out any alterations or modifications to this product.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product.
- Remove any packaging before giving toy to child.
- This toy has a light for aiming assistance. Ensure nobody using this toy shines the light directly in another person's eye.
- If the product is damaged or has any defects, please contact cservice@oypla.com.

Assembly Instructions


Parts List:

If you are missing any of the above parts, please contact cservice@oypla.com

Please check you have all parts below before attempting to assemble this product.

Please be aware that you will be referring to this parts list throughout the assembly process.


Assembly should be done by a responsible adult before giving toy to child.

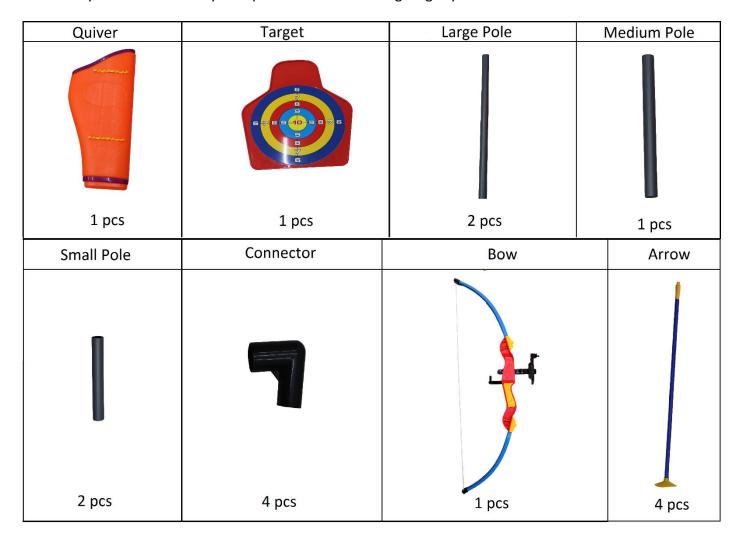



2. Attach a connector to the ends of the

 small poles (See picture to the right)

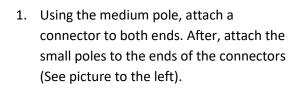



3. Now attach the large poles to the already assembled parts so that the poles are upright (See picture to the left).



4. Attach the target by sliding the brackets on the back of the target onto the stand that has been made. Push the target down the poles until both are in the end bracket and secure (See picture to the right).



Electrical Safety

Battery Warning:

- Do not mix old and new Batteries.
- Do not mix Alkaline, standard or rechargeable batteries.
- Remove batteries when product is stored for a long period of time or when batteries are exhausted.
- Dispose of exhausted batteries properly.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only the recommended batteries or equivalent are to be used, volts and size.
- Keep all batteries away from children.
- Batteries are to be inserted with correct polarity.

HAVE A QUESTION ABOUT YOUR PURCHASE?

OUR DEDICATED CUSTOMER SERVICES TEAM ARE HAPPY TO HELP CONTACT THEM VIA:

TELEPHONE: 020 3600 2255 EMAIL: cservice@oypla.com LIVE CHAT: www.oypla.com

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION







Environmental Protection

An Official OYPLA Branded Product

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.

