User Manual





Wooden Tower Game

USER MANUAL Model No: 3859

User Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is only to be used for its designated purpose.
- Never carry out any alterations or modifications to this product.
- Not suitable for children under thirty-six months.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product.
- If the product is damaged or has any defects, please contact cservice@oypla.com

This carton should contain:

60 x Wooden Blocks

To play with the Giant Tumbling Tower Game, remove all blocks from the packaging and count them to make sure that you have sixty.

After this, stack them in the way seen on the front page.

Begin to remove the blocks until the tower has been dismantled or it has collapsed.

Once done, either rebuild or put the blocks back into the carton.

HAVE A QUESTION ABOUT YOUR PURCHASE?

OUR DEDICATED CUSTOMER SERVICES TEAM ARE HAPPY TO HELP CONTACT THEM VIA:

TELEPHONE: 020 3600 2255 EMAIL: cservice@oypla.com LIVE CHAT: www.oypla.com

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION





