



Children's Punching Bag

USER MANUAL Model No: 3871

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Before using this product, make sure all fastenings are tightly in place and that everything is in order. Check periodically by an adult.
- This product is a toy and should only be used by children of its intended age range.
- Not suitable for children under 36 months.
- This product includes small parts which can be ingested or inhaled.
- Remove all packaging before giving the toy to a child.
- Children should be supervised at all times when using the punching bag.
- Do not discard of any packaging until you have checked that you have all of the parts and fittings required.
- If the product is damaged or has any defects, please contact <u>cservice@oypla.com</u>

USER MANUAL Model No: 3871

Assembly Instructions

Please check you have all parts below before attempting to assemble this product.

Please be aware that you will be referring to this parts list throughout the assembly process.


Assembly should be done by a responsible adult before giving toy to child.

- Fill the stand with sand or water to prevent it from tipping over during use.
- 2. Attach the supports to the stand and insert the lower pole. Secure using the bolt and washer.
- Insert the upper pole and secure at the desired height.
- 4. Bolt the punching ball to the top of the pole using the provided spanner.

HAVE A QUESTION ABOUT YOUR PURCHASE?

OUR DEDICATED CUSTOMER SERVICES TEAM ARE HAPPY TO HELP CONTACT THEM VIA:

> TELEPHONE: 020 3600 2255 EMAIL: cservice@oypla.com LIVE CHAT: www.oypla.com

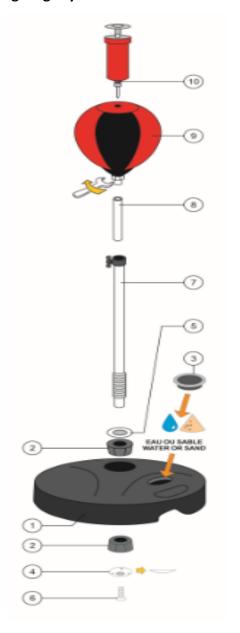

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION







