



PLEASE READ THIS USER'S MANUAL THOROUGHLY BEFORE USE

# USER MANUAL

## PET DRYER

MODEL NO.: 3895



## **SAFETY INSTRUCTIONS** (Please keep these instructions)

Please read the entire instruction manual before using the product and then save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. In the event of technical problems or other queries, please contact our Customer Services.

- The product should only be connected to a 230 V AC, 50 Hz electrical outlet.
- Never leave the product unattended whilst it is switched on.
- If you have to leave the product unattended, even for a short while, always switch it off.
- Keep the product out of children's reach and do not allow children to use it.
- The product is only intended for normal domestic use and only in the manner described in this instruction manual.
- Inspect the mains lead regularly. Never use the product if the mains lead or plug has been damaged in any way.
- Do not place the mains lead on or near any hot surface.
- Do not touch the product if your hands are moist or wet.
- Do not place the unit in standing or running water. This may cause a risk of electrical shock. Keep units out of baths, and do not operate on a wet floor.
- Do not allow any material to clog or block air intakes, as this may cause the unit to overheat and result in a fire or electrical hazard. Regularly clear hair or other substances from air intakes.
- Never move the product by pulling on the lead.
- Only use accessories that are recommended by the manufacturer or retailer. The use of other accessories can lead to a risk of injury to people and animals or damage to the product.

### **⚡ WARNING ⚡**

To Reduce The Risk of Fire or Electric Shock, follow these basic precautions:

- Read all instructions before using the dryer.
- Never allow children to operate, play with, the dryer.
- Never clean dryer parts with flammable fluids. The fumes can create a fire hazard or explosion.

**-Save these instructions-**

## USER INSTRUCTIONS (Please keep these instructions)

### Functions

Use the pet dryer to blow dirt and undercoat out of a dog before grooming; to do fast and easy rough cuts, to get rid of unwanted undercoat, or to separate matted hair. Use the dryer after bathing a pet to blow off the excess water for faster drying. Use the dryer to dry quickly and fluff before finishing the pet.

**Caution:** Do not blow air from the rubber cone directly into a pet's face, ears or eyes. The forceful air may cause injury to the pet.

### Operating Instructions

Plug in the unit. Hold the pet with one hand to keep it calm. With the other hand hold the nozzle firmly and then turn on the switch to the speed you desire.

1. Use the dryer to get rid of undercoat and dirt, and to loosen any matting. Starting from the rear of the pet, slowly blow and separate the coat, exposing the skin. Continue this until all undercoat is released.
2. Use at the bathtub to blow off excess water after bathing. First towel-dry the pet to remove dripping water; then start at the rear and use short fast strokes to blow off excess water. Make sure to blow moisture off the pet from the skin out, not just on the top of the coat.
3. Use at a grooming table to dry and fluff the pet before finishing. Use the dryer at two different speeds, with or without the hose attachment depending on your drying needs. The unit produces enough heat to speed the drying process without danger to the pet. A pet's coat will fluff and straighten during the drying process. Even if the pet is already dry and needs more fluffing, the dryer will help to produce a straight fluffy coat and enhance your finishing groom for a quality look.

### Care and Maintenance

1. The shell of the dryer can be cleaned with a soft cloth and warm soapy water. Do not allow water near the vents.
2. Clean the filter regularly to prevent over-heating and loss of power. As hair builds up, use water or a strong fan to clean the filters regularly. The filters must be completely dry before attaching to the dryer to prevent damage.

### Specifications

Rated Voltage: 230V AC, 50Hz

Power: 500-2800W

Wind Speed: 25-50m/s

Temperature: 35-70°

### Disposal of Unit

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.recyclenow.co.uk](http://www.recyclenow.co.uk) for access to information about the recycling of electrical items. Please visit [www.weeeireland.ie](http://www.weeeireland.ie) for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



**An Official Oypla Branded Product**



Imported into the EU by Oypla.com LLP, Uxbridge, UB8 2FX