

# HOME

THANK YOU FOR YOUR ORDER

## Contents

- 1 Front Cover  
-
- 2 Safety  
Instructions  
-
- 3 Operating  
Instructions  
-
- 6 Trouble  
Shooting  
-
- 7 Back Cover

End



## Under-Counter Refrigerator

## Contents

1	Front Cover
-	
2	<b>Safety Instructions</b>
-	
3	Operating Instructions
-	
6	Trouble Shooting
-	
7	Back Cover

End

# Safety Instructions

## Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- Never carry out any alterations or modifications to this product.
- This product is intended for indoor use only.
- Clean only using a damp cloth. Do not use any strong industrial cleaning substances, as these may damage the product.
- Do not touch cooling surfaces in the freezer, especially with wet hands, as this can cause burning or damage to your skin.
- When removing a plug from a socket, always pull on the plug and not on the cable.
- Ensure that the socket into which the appliance is plugged is in accordance with the rating label on the appliance, and that the socket is earthed.
- Do not plug in the appliance with wet hands.
- Never operate this electrical appliance in the immediate vicinity of any water sources.
- When the appliance is not in use, always unplug it.
- Do not store glass or metal containers that contain liquids in the fridge, as they may break due to the temperature, creating a hazard.
- Only use this product on stable, level and dry ground.
- If this product is damaged or defective, please contact [cservice@oypla.com](mailto:cservice@oypla.com)

 Never exceed the 85L capacity limit.

europa.eu Product Registry QR Code



OYP-39


## Contents

1	Front Cover
-	
2	Safety Instructions
-	
3	Operating Instructions
-	
6	Trouble Shooting
-	
7	Back Cover

End

# Operating Instructions

Please refer to the diagram below for instructions on how to operate your product.

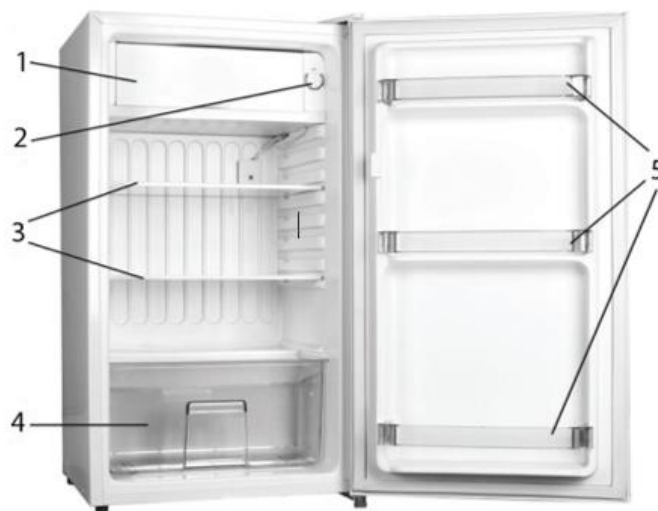

1. Icebox
2. Temperature adjuster
3. Removable shelves
4. Salad/vegetable storage bin
5. Bottle balconies

## Installation

- **WARNING:** This appliance must be earthed.
- **WARNING:** Use two or more people to move the refrigerator. Failure to do so can result in injury.
- The appliance is designed to be free standing only and is not designed to be recessed or built in.
- Allow 12cm of space between the back and sides of the refrigerator, thus allowing the proper air circulation.
- Locate the fridge away from direct sunlight and sources of heat (stove, heater, radiator, etc.) as these can affect the acrylic coating and electrical consumption.
- Avoid locating the refrigerator in moist areas.
- This appliance requires a 220-240V, 50HZ power supply. Please ensure that the power supply is suitable.
- Do not use an extension cord with this appliance. If the power cord is too short, have a qualified electrician or service technician install an outlet near the appliance.

# Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
3	Operating Instructions
-	-
6	Trouble Shooting
-	-
7	Back Cover

End

## Before Using Your Appliance

Page 4

- Remove the exterior and interior packing.
- Check to make sure you have the following parts:
  - 2 x Removable shelves
  - 1 x Salad/vegetable bin
  - 3 x Bottle balconies
- Before connecting the refrigerator to the active power source, let it stand upright for approximately three hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface and all parts before use.

## Food Storage

### Refrigerator Compartment

- The shelf positions in the fridge can be adjusted to suit your requirements.
- The temperature varies from one section of the fridge to another. The coldest part is immediately below the icebox and near to the rear.
- Do not place hot/warm food or liquids in the fridge compartment. Leave this to cool at room temperature and place it in the fridge, ensuring that it has adequate air circulation.
- Meat and fish that are stored in the refrigerator should be well wrapped and consumed within one to two days.
- To reduce humidity and the consequence of increased frosting, do not store liquids in unsealed containers.

### Icebox Compartment

- This compartment is designed for production of ice cubes and short-term storage (being three to four days at most) of some commercially frozen foods.
- The temperature in this compartment does not get cold enough to freeze food safely for long periods of time and works best when the food is already frozen. This means that the chiller compartment is NOT a true freezer.
- The chiller door is at risk of breaking if there is an excessive build-up of ice. This part is not covered under the returns policy. Be sure to defrost when the ice reaches ¼ inch thick.

### Thermostat Settings

- To control the initial temperature, adjust the control dial accordingly. The temperature settings go from '1' to '7', each achieving varying degrees of cooling in both the fridge and freezer compartments, with '7' being the coldest.
- The recommended default setting is position '3'.
- When turning on the refrigerator for the first time, set the temperature control to '6'.
- PLEASE NOTE that ambient temperatures (room temperatures), the temperature and quantity of recently stored food and how often the door is opened will all affect the temperature inside the refrigerator.

# Contents

- 1 Front Cover
- 
- 2 Safety Instructions
- 
- 3 Operating Instructions
- 
- 6 Trouble Shooting
- 
- 7 Back Cover

End

## Cleaning your Refrigerator

Always switch the appliance power supply off or unplug it before you start to begin cleaning or maintenance.

Do NOT clean the appliance by pouring/running water through it. This will cause damage to the parts and consequently break the refrigerator.

The interior surfaces should be cleaned periodically to avoid odours and cross contamination.

Wash the shelves and trays with a mild detergent solution and warm water. Do NOT put them in the dishwasher.

Wash the outside of the refrigerator with a mild detergent and warm water.

When cleaning the controls or any of the electrical parts, be sure to wring the water out of the cleaning tool you are using.

Leave to stand un-plugged for twenty-four hours after cleaning to avoid the risk of electric shock. Once the appliance has dried, reconnect the appliance to the power supply with dry hands and switch the appliance on.

If the appliance is going to be left switched off for any length of time, clean the interior and prop the door open to prevent a build-up of odour.

## Moving Your Refrigerator

Turn the temperature to OFF, unplug the refrigerator and remove the food shelves and trays.

Remove or securely tape down all loose items inside your refrigerator.

Tape the door shut to avoid it swinging open whilst moving.

Be sure the refrigerator stays secure in an upright position during transportation. Also, protect the outside of the refrigerator with a blanket or similar item.

### **WARNING**

To reduce the risk of fire, electrical shock or general injury when using your refrigerator, follow these precautions:

- Never allow children to operate, play with, or crawl inside the refrigerator.
- Never clean refrigerator parts with flammable fluids. The fumes can create a fire hazard or explosion.
- Do not store or use gasoline or any flammable vapour and liquids in the vicinity of this or any other refrigerator. The fumes can create a fire hazard or explosion.

## Contents

# Troubleshooting

1	Front Cover
-	
2	Safety Instructions
-	
3	Operating Instructions
-	
6	<b>Trouble Shooting</b>
-	
7	Back Cover

End

PROBLEM	POSSIBLE CAUSE
Refrigerator does not operate.	Not plugged in or the refrigerator temperature control is set at 'OFF'. The circuit breaker tripped or a blown fuse.
Turns on and off frequently.	The room temperature is hotter than normal. A large amount of food has been added to the refrigerator. The door is opened too often/not completely closed. The temperature control is not set correctly/
Vibrations.	Check to ensure the refrigerator is level
The refrigerator seems to make too much noise.	The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling caused by the flow of refrigerant. Contraction and expansion on the inside of the walls cause a popping noise.
The door will not close properly.	The refrigerator is not level. The gasket is dirty. The shelves, bins, or baskets are out of position.
The appliance performs poorly.	Thermostat set too low. Check that the door is able to fully close.

## Contents

1	Front Cover
-	
2	Safety Instructions
-	
3	Operating Instructions
-	
6	Trouble Shooting
-	
7	Back Cover
	End



## HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

**Telephone:** 020 3600 22 55  
**Email:** [cservice@oypla.com](mailto:cservice@oypla.com)  
**Live Chat:** [WWW.OYPLA.COM](http://WWW.OYPLA.COM)

## CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

# OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

## ENVIRONMENTAL PROTECTION

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.

