

LEISURE

THANK YOU FOR YOUR ORDER

Contents

- 1 Front Cover
 -
- 2 Safety Instructions
 -
- 2 Warning
 -
- 3 Operating Instructions
 -
- 4 Back Cover

End



Camping Bed

Contents

1	Front Cover
-	
2	Safety Instructions
-	
2	Warning
-	
3	Operating Instructions
-	
4	Back Cover

End

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Make sure all fastenings are in place, and that everything is in order, before using the product.
- This product is not a toy, and is only to be used for its designated purpose.
- Keep fingers, loose clothing, and hair away when folding the product.
- This product is for domestic use only.
- Only use this product on stable, level and dry ground.
- Do not carry out alterations or modifications to this product.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances.
- Leaving the product outside exposed to weather, especially direct sun and rain, will speed the weathering process. This can be slowed by removing the product from these conditions, or covering it with a suitable cover.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Warning


 **Never exceed the maximum load capacity of 100kg. Doing so may result in product failure, and/or personal injury.**

Contents

Operating Instructions

- 1 Front Cover
-
- 2 Safety Instructions
-
- 2 Warning
-
- 3 Operating Instructions
-
- 4 Back Cover


End

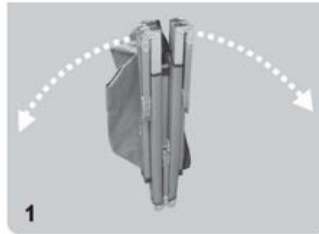

1 Remove the bed from the carry bag and extend the frame as shown.




2 Rotate the legs backwards.

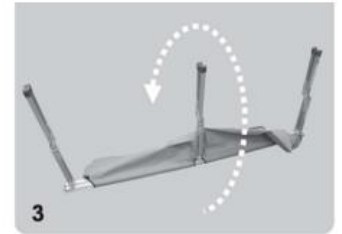

3 Turn the frame upside-down.




4 Pull both sides apart to open the frame.

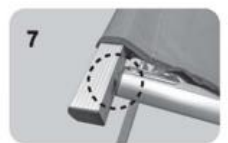

6 Slide the end frame through the end of the mat. Line up the holes on each side of the end frame with the plastic knobs in order to secure the end frame at each corner.



5 Once the frame is open, pull both ends of the mat so it is taut.

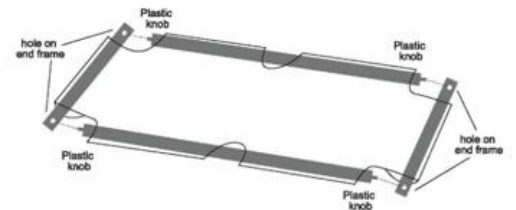

max. user weight : 100 kg

Contents

- 1 Front Cover
-
- 2 Safety Instructions
-
- 2 Warning
-
- 3 Operating Instructions
-
- 4 Back Cover

End

HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55
Email: cservice@oypla.com
Live Chat: WWW.OYPLA.COM

CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT