

GARDEN

User Manual

Model Code: 3912

THANK YOU FOR YOUR ORDER

Contents

- 1 Front Cover
-
- 2 Safety Instructions
-
- 2 Assembly Instructions
-
- 3 Back Cover

End



Garden Wall Clock

Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
2	Assembly Instructions
-	-
3	Back Cover

End

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Before using the clock, make sure all fastenings are tightly in place and that everything is in order, and checked periodically.
- This clock is not a toy, and is only to be used for its designated purpose.
- This product includes small parts that could cause choking.
- Only use AA Batteries, as instructed.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances.
- Do not carry out alterations or modifications to this product.
- If the product is damaged or has any defects, please contact cservice@oypla.com.


Assembly Instructions

Adjust the clock by turning the wheel in a clockwise direction only.

Insert the battery in the battery compartment.

Ensure that the + and – symbols are facing the correct direction.

2 AA Batteries required.

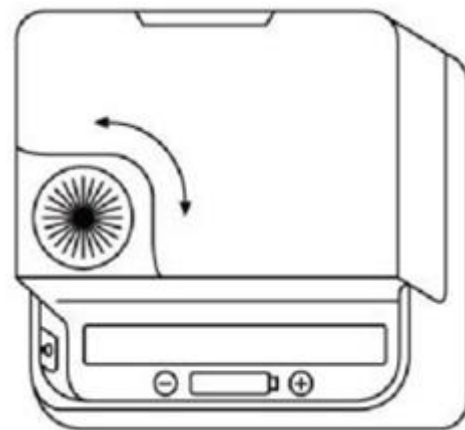

Contents

1	Front Cover
-	-
2	Safety
	Instructions
-	-
2	Assembly
	Instructions
-	-
3	Back Cover
	End



Imported by Oypla.com LLP, Uxbridge, UB8 2FX



HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55
Email: cservice@oypla.com
Live Chat: WWW.OYPLA.COM

CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

ENVIRONMENTAL PROTECTION

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



Model Code: 3912

Oypla.com LLP / www.oypla.com