

KIDS

THANK YOU FOR YOUR ORDER

Contents

- 1 Front Cover
-
- 2 Safety
Instructions
-
- 3 Assembly
Instructions
-
- 5 Back Cover

End



Children's Easel

Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
3	Assembly Instructions
-	-
5	Back Cover

End


Safety Instructions


Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Before using the easel, make sure all fastenings are tightly in place and that everything is in order, and checked periodically by an adult.
- Children must be supervised at all times when using the easel.
- This product is only to be used for its designated purpose.
- This product contains small parts that could be a choking hazard if swallowed. Keep these items away from children.
- Only use this product on stable, level and dry ground.
- This product is for domestic use only.
- This product contains small parts that can be accidentally swallowed – never allow children to put any of the parts in their mouths at any time.
- Remove any packaging before giving toy to child.
- Please advise children to only use marker pens on the whiteboard side, and chalk only on the blackboard. Chalk and pens should not be used on any other section of the easel.
- Do not carry out alterations or modifications to this product.
- Pens can stain if used on skin or clothing.
- Leaving the easel outside exposed to weather, especially direct sun, rain and salt air, will speed with weathering process. This can be slowed by removing the chair from these conditions.
- Keep away from fire.
- This product is not suitable for children under 3 years.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Warnings

 Never under any circumstances allow children to insert any of the parts or accessories into their mouths.

 Always ensure children are supervised whilst using the easel.

Contents









1	Front Cover
-	
2	Safety Instructions
-	
3	Assembly Instructions
-	
5	Back Cover

End

Assembly Instructions


Parts List:

- If you are missing any of the below parts, please contact cservice@oypla.com
- Please be aware that you will be referring to this parts list throughout the assembly process.

Part	Quantity	Image
Leg (A)	2	
Leg (B)	2	
Bottom Tray	1	
Blackboard/Whiteboard	1	
Large Side Connectors	2	
Small Side Connectors	2	
Wood Screw	4	
Plastic Bolt	10	

Note: You will also find a pack of chalk sticks, two erasers and a pen in the package. These are not required in the assembly process.

- 1 Firstly, create the two side A-frames. This can be done by aligning the notch in *Leg (A)* with the corresponding top corner of *Leg (B)* to create an A shape. Use a *Large Side Connector* and two of the *Plastic Bolts* provided to secure the two legs together, using the middle hole, like in the image below. **Note:** ensure the bottom two holes have the larger side facing up, not down, as these need to be this way later on when we assemble the *Bottom Tray*.

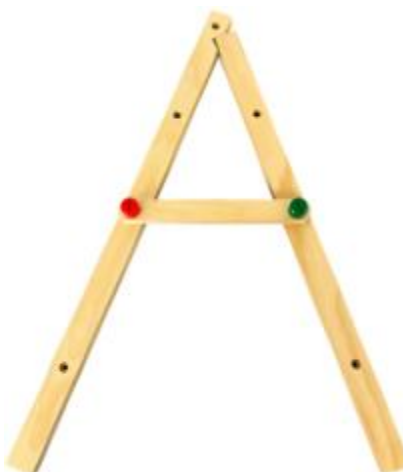

Model Code: 3927

Oypla.com LLP / www.oypla.com

Contents

- 1 Front Cover
-
- 2 Safety Instructions
-
- 3 Assembly Instructions
-
- 5 Back Cover

End

2

Then, attach the *Blackboard/Whiteboard* to the A-frames you created in step 1. Do this using more *Plastic Bolts*. One *Plastic Bolt* should be inserted into the hole at the top of the A-frame, ensuring it is all the way in so it connects with the *Blackboard/Whiteboard*. At this point, attach the *Small Side Connector* using more *Plastic Bolts*, like the below image.



3

Afterwards, simply attach the Bottom Tray to the A-frame sides using the four Wood Screws provided.

Note: when cleaning the easel, only use a damp cloth. Using harsh detergents or cleaning chemicals can damage the boards and frame.

Contents

- 1 Front Cover
-
- 2 Safety Instructions
-
- 3 Assembly Instructions
-
- 5 Back Cover

End



HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55
Email: cservice@oypla.com
Live Chat: WWW.OYPLA.COM

CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT