



Electric Peeler & Salad Spinner

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- The product should only be connected to a 230 V AC, 50 Hz electrical outlet.
- Never leave the product unattended whilst it is switched on.
- If you have to leave the product unattended, even for a short while, always switch it off.
- Keep the product out of children's reach and do not allow children to use it.
- The product is only intended for normal domestic use and only in the manner described in this instruction manual.
- Inspect the mains lead regularly. Never use the product if the mains lead or plug has been damaged in any way.
- Do not place the mains lead on or near any hot surface.
- Do not touch the product if your hands are moist or wet.
- Never move the product by pulling on the lead.
- Before putting potatoes in the appliance, make sure that the power is switched off.
- Do not put more than 1kg of potatoes into the peeler and do not let the machine work continuously for more than 4 minutes.
- Make sure that all the parts are in the correct position, otherwise the machine will not operate properly.
- The cutter dish is very sharp, take care when cleaning and handling.
- Never open the machine while it is in operation.
- **WARNING** – This product contains sharp, moving parts. When product is in operation, under no circumstances should you insert fingers etc. into the peeler.
- If the product is damaged or has any defects, please contact cservice@oypla.com

WARNING


To Reduce The Risk of Fire or Electric Shock,
follow these basic precautions:

- Read all instructions before using the electric peeler.
- Never allow children to operate or play with the electric peeler.
- Unplug or disconnect this product from the power supply before cleaning.

-Save these instructions-

Operating Instructions

Product Details:

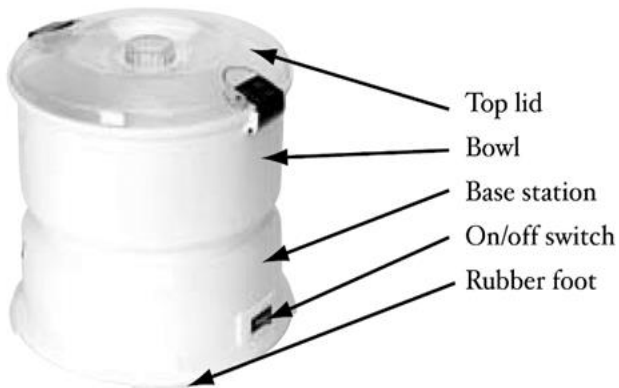

Before First Use:

- Before using the appliance, clean the bowl and cutter dish with warm water.
- Before each use, make sure the potato peeler is positioned on a clean, dry surface and that the machine is stabilized on its rubber feet.
- Check that the appliance is switched off before plugging it in.
- Place the bowl onto the base section and the cutter disk onto the mounting. Check that both parts are correctly placed.

Operating Instructions:

- Pour 2 to 3 cups of water into the bowl and add enough potatoes to cover the cutter disk (but never more than 1kg at a time). Close the lid carefully.
- Switch the power "ON" and the machine will start working. Please note that the machine will vibrate but the rubber feet will keep it in place during use.
- The peeler will take approximately 2 minutes to peel potatoes, but monitor the progress through the transparent lid. Potatoes of irregular shape may take up more space and take longer to peel, but do not allow the peeler to run for more than 4 minutes at a time.
- After the machine has finished peeling, switch off the power, unplug from the mains, remove the top cover and remove the potatoes carefully.
- Wash the potatoes with fresh water and remove any excess peelings with a hand peeler or small knife.
- To use the salad spinner, simply remove the cutting dish and install the spinner onto the mounting.

Care And Maintenance:

- After each use, wash the bowl and cutter with fresh warm water.
- Before cleaning, always switch OFF and unplug the appliance from the mains.
- Do not immerse the power cable, plug or base in water or any other liquid.
- Do not use anything other than fresh water to clean the appliance.
- After cleaning, use a soft cloth to dry all parts before storage.
- Never use abrasive cloths for cleaning.

HAVE A QUESTION ABOUT YOUR PURCHASE?

OUR DEDICATED CUSTOMER SERVICES TEAM ARE HAPPY TO HELP
CONTACT THEM VIA:

TELEPHONE: 020 3600 2255

EMAIL: cservice@oypla.com

LIVE CHAT: www.oypla.com

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION



Environmental Protection

OYPLA.COM

An Official OYPLA Branded Product



Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



Imported by Oypla.com LLP, Uxbridge, UB8 2FX

USER MANUAL Model No: 3935